

humiSteam Basic

humidifiers

CAREL



ENG User manual

**→ LEGGI E CONSERVA
QUESTE ISTRUZIONI ←**
**→ READ AND SAVE
THESE INSTRUCTIONS ←**

Integrated Control Solutions & Energy Savings

WARNINGS



The CAREL humidifiers are advanced products, whose operation is specified in the technical documentation supplied with the product or can be downloaded, even prior to purchase, from the website www.carel.com. Each CAREL S.p.A. product, in relation to its advanced level of technology, requires setup/configuration/programming/commissioning to be able to operate in the best possible way for the specific application. The failure to complete such operations, which are required/indicated in the user manual, may cause the final product to malfunction; CAREL accepts no liability in such cases.

The customer (manufacturer, developer or installer of the final equipment) accepts all liability and risk relating to the configuration of the product in order to reach the expected results in relation to the specific final installation and/or equipment. CAREL may, based on prior agreements, act as a consultant for the installation/commissioning/use of the unit, however in no case does it accept liability for the correct operation of the humidifier and the final installation if the warnings or suggestions provided in this manual or in other product technical documents are not heeded. In addition to observing the above warnings and suggestions, the following warnings must be heeded for the correct use of the product:

- **DANGER OF ELECTRIC SHOCK**

The humidifier contains live electrical components. Disconnect the mains power supply before accessing inside parts or during maintenance and installation.

- **DANGER OF WATER LEAKS**

The humidifier automatically and constantly fills/drains certain quantities of water. Malfunctions in the connections or in the humidifier may cause leaks.

- **DANGER OF BURNS**

The humidifier contains high temperature components and delivers steam at 100°C/ 212°F.



Important:

- The installation of the product must include an earth connection, using the special yellow-green terminal available in the humidifier.
- The environmental and power supply conditions must conform to the values specified on the product rating labels.
- The product is designed exclusively to humidify rooms either directly or through distribution systems (ducts).
- Only qualified personnel who are aware of the necessary precautions and able to perform the required operations correctly may install, operate or carry out technical service on the product.
- Only water with the characteristics indicated in this manual must be used for steam production.
- All operations on the product must be carried out according to the instructions provided in this manual and on the labels applied to the product. Any uses or modifications that are not authorised by the manufacturer are considered improper. CAREL S.p.A. declines all liability for any such unauthorised use.
- Do not attempt to open the humidifier in ways other than those specified in the manual.
- Observe the standards in force in the place where the humidifier is installed.
- Keep the humidifier out of the reach of children and animals.
- Do not install and use the product near objects that may be damaged when in contact with water (or condensate). CAREL S.p.A. declines all liability for direct or indirect damage following water leaks from the humidifier.
- Do not use corrosive chemicals, solvents or aggressive detergents to clean the inside and outside parts of the humidifier, unless specifically indicated in the user manual.
- Do not drop, hit or shake the humidifier, as the inside parts and the linings may be irreparably damaged.

CAREL S.p.A. adopts a policy of continual development. Consequently, CAREL reserves the right to make changes and improvements to any product described in this document without prior warning. The technical specifications shown in the manual may be changed without prior warning.

The liability of CAREL in relation to its products is specified in the CAREL S.p.A. general contract conditions, available on the website www.carel.com and/or by specific agreements with customers; specifically, to the extent where allowed by applicable legislation, in no case will CAREL S.p.A., its employees or subsidiaries be liable for any lost earnings or sales, losses of data and information, costs of replacement goods or services, damage to things or people, downtime or any direct, indirect, incidental, actual, punitive, exemplary, special or consequential damage of any kind whatsoever, whether contractual, extra-contractual or due to negligence, or any other liabilities deriving from the installation, use or impossibility to use the product, even if CAREL S.p.A. or its subsidiaries are warned of the possibility of such damage.

DISPOSAL





The humidifier is made up of metal parts and plastic parts. In reference to European Union directive 2002/96/EC issued on 27 January 2003 and the related national legislation, please note that:

1. WEEE cannot be disposed of as municipal waste and such waste must be collected and disposed of separately;
2. the public or private waste collection systems defined by local legislation must be used. In addition, the equipment can be returned to the distributor at the end of its working life when buying new equipment;
3. the equipment may contain hazardous substances: the improper use or incorrect disposal of such may have negative effects on human health and on the environment;
4. the symbol (crossed-out wheeled bin) shown on the product or on the packaging and on the instruction sheet indicates that the equipment has been introduced onto the market after 13 August 2005 and that it must be disposed of separately;
5. in the event of illegal disposal of electrical and electronic waste, the penalties are specified by local waste disposal legislation.


Warranty on the materials: 2 years (from the date of production, excluding consumables).

Approval: the quality and safety of CAREL S.P.A. products are guaranteed by the

ISO 9001 certified design and production system, as well as by the   mark.

Contents

| | | | |
|---|-----------|---|-----------|
| 1. INTRODUCTION AND ASSEMBLY | 7 | 8. ALARMS | 21 |
| 1.1 humiSteam basic (UEY*) | 7 | 9. MAINTENANCE AND SPARE PART | 23 |
| 1.2 Dimensions and weights | 7 | 9.1 Spare parts for models UE001 to UE018 | 23 |
| 1.3 Opening the packaging | 7 | 9.2 Spare parts for models UE025 to UE065 | 25 |
| 1.4 Positioning | 7 | 9.3 Cleaning and maintenance of the cylinder | 27 |
| 1.5 Wall-mounting | 7 | 9.4 Mechanically draining the water in the cylinder | 27 |
| 1.6 Removing the front cover | 8 | 9.5 Cylinder connection, three-phase models UE025 to UE065 | 28 |
| 1.7 Fitting the front cover | 9 | 9.6 Cleaning and maintenance of the other components | 28 |
| 1.8 Components and accessories | 9 | 10. WIRING DIAGRAMS | 29 |
| 2. WATER CONNECTIONS | 10 | 10.1 Diagram of single-phase models UE001 to UE009 (208-230V) | 29 |
| 2.1 Supply water | 12 | 10.2 Diagram of three-phase models UE003 to UE018 (208-230-460-575V) | 30 |
| 2.2 Drain water | 12 | 10.3 Diagram of three-phase models UE025 (208-230-460-575V) and UE045 (460-575 V) | 31 |
| 2.3 Drain tempering | 12 | 10.4 Diagram of three-phase models UE045 (208-230 V) and UE065(460-575V) | 32 |
| 3. STEAM DISTRIBUTION | 13 | 11. GENERAL FEATURES AND MODELS | 33 |
| 3.1 CAREL jet distributors (SDPOEM00**) | 13 | 11.2 Technical specifications | 35 |
| 3.2 CAREL linear distributors for air ducts (DP***DRU) | 13 | 11.3 Models of steam hoses | 36 |
| 3.3 CAREL steam blowers (VSDU0A*, models UE001 to UE018 only) | 13 | 11.5 Models of linear distributors and typical installations | 37 |
| 3.4 Steam hoses | 14 | 11.6 Table of parameter b1 | 39 |
| 3.5 Condensate drain hose | 14 | 11.6 Table of parameter b1 | 41 |
| 4. ELECTRICAL CONNECTIONS | 15 | 11.7 CONTROLLING THE BOARD VIA NETWORK | 43 |
| 4.1 Preparing the electric cableways | 15 | 11.8 Controlling production using variables I62 and I63 | 44 |
| 4.2 Power cable connection | 15 | 11.9 Read alarm log via the network | 44 |
| 4.3 Steam production control signals (M2.1 - M2.7) | 15 | 11.10 Loss of network communication | 44 |
| 4.4 Alarm contact (M5.1 - M5.2) | 16 | 11.11 Modbus® protocol on the UEY boards | 44 |
| 4.5 Auxiliary contact: production request present, external fan control (M14.1 - M14.3) | 16 | 11.12 Exceptions managed | 44 |
| 5. REMOTE TERMINAL AND SUPERVISORY NETWORK | 17 | 12. ADVANCED FUNCTIONS | 45 |
| 5.1 Remote display terminal | 17 | 12.1 Operating principle | 45 |
| 5.2 RS485 supervisory network (M1.1-M1.3) | 17 | 12.2 Control principles | 45 |
| 6. STARTING AND USER INTERFACE | 18 | 12.3 Supply water conductivity | 45 |
| 6.1 Starting | 18 | 12.4 Automatic draining | 45 |
| 6.2 Stopping | 18 | 12.5 Automatic insufficient supply water management | 46 |
| 6.3 Display | 18 | 12.6 Alarm relay switching | 46 |
| 6.4 Keypad | 18 | 12.7 Auxiliary contact management (active fan request) | 46 |
| 6.5 Main display | 18 | 12.8 Manual procedure | 46 |
| 6.6 Disabling | 18 | 12.9 LEDs on the control board | 46 |
| 6.7 Recalling the manufacturer defaults | 19 | | |
| 6.8 Visualization release Software | 19 | | |
| 6.9 Match digit (match between the softwares of board and terminal) | 19 | | |
| 6.10 Reset cylinder hour counters | 19 | | |
| 6.11 Parameters: Saving/recalling the user settings | 19 | | |
| 6.12 Manually drain the water in the cylinder | 19 | | |
| 7. CONFIGURATION PARAMETERS | 20 | | |
| 7.1 Accessing and setting the parameters | 20 | | |
| 7.2 Basic parameters | 20 | | |
| 7.3 Advanced parameters | 20 | | |
| 7.4 Serial connection parameters | 20 | | |
| 7.5 Read-only parameters | 20 | | |



| | | | |
|---|---|--|-------------------|
| 1 | ID prefix; | | |
| 2 | rated instant steam production in kg/h / lbr/h: | mod. | production |
| | | 001 | 1.5/3.3 |
| | | 003 | 3/6.6 |
| | | 005 | 5/11 |
| | | 008 | 8/17.6 |
| | | 009 | 9/19.8 |
| | | 010 | 10/22 |
| | | 015 | 15/33 |
| | | 018 | 18/39.7 |
| | | 025 | 25/55.1 |
| | | 035 | 35/77.2 |
| | | 045 | 45/99.2 |
| | | 065 | 65/143.3 |
| 3 | type of control: | Y= UEY basic | |
| 4 | type - power supply: | type | V |
| | | U= 208 | 1~N |
| | | D= 230 | 1~N |
| | | W= 208 | 3~ |
| | | K= 230 | 3~ |
| | | M= 460 | 3~ |
| | | N= 575 | 3~ |
| 5 | option: | 0= standard cylinder 1= cylinder for low conductivity | |
| 6 | | U= UL certified version for the American market | |
| 7 | | level revision | |

Table 1.a

1. INTRODUCTION AND ASSEMBLY

1.1 humiSteam basic (UEY*)

Range of isothermal immersed electrode humidifiers with backlit display for the control and distribution of steam.

Models available (identifiable from the code shown on the product):

- UE001, UE003, UE005, UE008, UE009, UE010, UE015, UE018 with steam production capacity up to 18 kg/h (39.7 lb/h), water connections under the base of the humidifier;
- UE025, UE035, UE045, UE065 with steam production capacity from 25 to 65 kg/h (55.1 to 144.3 lb/h), water connections on the side of the humidifier.

1.2 Dimensions and weights

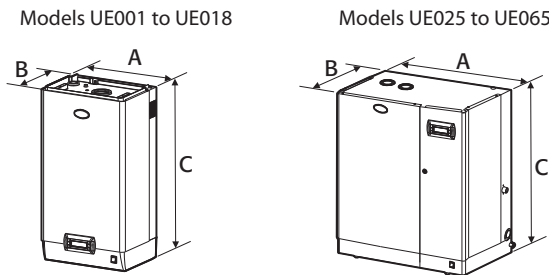


Fig. 1.a

| | | UE001 to UE008 | UE009 to UE018 | UE025 to UE045 | UE045** to UE065 |
|-------------------|------------|----------------|----------------|----------------|------------------|
| dimensions mm (") | A | 365 (14.4) | 275 (10.8) | 545 (21.5) | 635 (25.0) |
| | B | 275 (10.8) | 712 (28.0) | 375 (14.8) | 465 (18.3) |
| | C | 712 (28.0) | 815 (32.0) | 465 (18.3) | 890 (35.0) |
| weights kg (lb) | packaged | 16 (35.3) | 20 (44.0) | 39 (86.0) | 51 (112.4) |
| | empty | 13,5 (29.8) | 17 (37.5) | 34 (74.9) | 44 (97.0) |
| | installed* | 19 (41.9) | 27 (59.5) | 60,5 (133.4) | 94 (207.2) |

Tab. 1.a

*: in operating conditions, filled with water

** : 230 Vac model

1.3 Opening the packaging



- make sure the humidifier is intact upon delivery and immediately notify the transporter, in writing, of any damage that may be due to careless or improper transport;
- move the humidifier to the site of installation before removing from the packaging, grasping the neck only from underneath the base;
- open the cardboard box, remove the protective material and remove the humidifier, keeping it vertical at all times.

1.4 Positioning

- the unit is designed to be mounted on a wall that is strong enough to support the weight in normal operating conditions (see Wall-mounting below). Models UE025 to UE065 can stand on the floor;
- to ensure correct steam distribution, position the humidifier near the point of steam distribution;
- make sure the humidifier is level, allowing the minimum clearances (see Fig. 1.b) for maintenance operations.

! Important: during operation the metal casing heats up and the rear part resting against the wall may reach temperatures in excess of 60 °C (140 °F).

Distances from walls

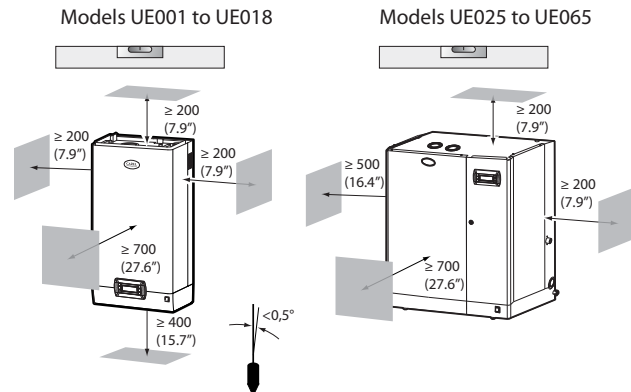


Fig. 1.b

1.5 Wall-mounting

Fit the humidifier on the wall using the support bracket and the screw kit supplied (for the dimensions in mm/inches see Fig. 1.d).

Assembly instructions:

1. unscrew the wall bracket from the humidifier bracket;
2. fasten the wall bracket (see Fig. 1.c), checking horizontal position with a spirit level; if installed on a masonry wall, the plastic anchor plugs (dia. 8 mm/0.31") and screws (dia. 5 mm x L= 50 mm/ 0.19" x L= 1.97") supplied can be used;
3. hang the appliance to the bracket using the slot on the top edge of the rear of the appliance;
4. secure the appliance to the wall through the hole in the centre on the rear of the unit. For the weights and dimensions see Tab.1.a.

Models UE001 to UE065


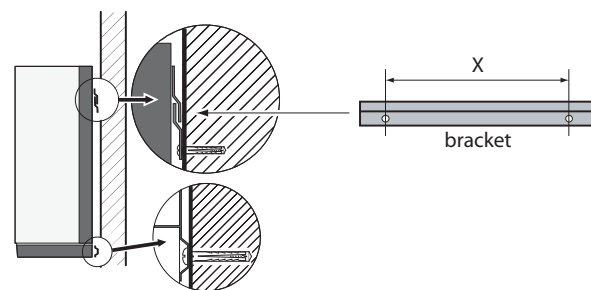


Fig. 1.c

Spacing of the holes on the wall

Models UE001 to UE018

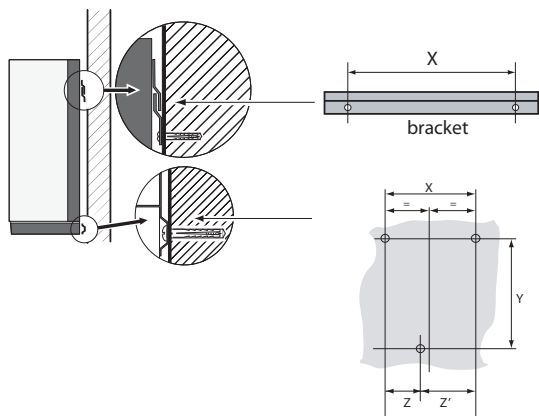

Models UE025 to UE065

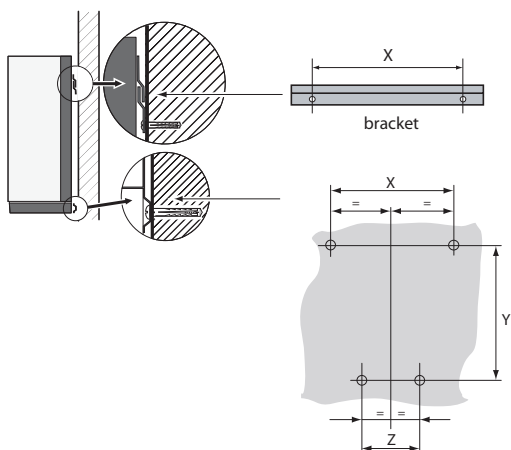


Fig. 1.d

Models UE025 to UE065

| distance mm (") | Models | | | |
|--------------------|-------------------|-------------------|-------------------|--------------------|
| | UE001 to UE018 | UE009 to UE018 | UE025 to UE045 | UE045* to UE065 |
| X | 270 (10.7) | 270 (10.7) | 445 (17.5) | 535 (21.0) |
| Y | 580 (22.8) | | 655 (25.8) | 730 (28.7) |
| Z | 107 (4.2) | 107 (4.2) | 250 (9.8) | 340 (13.4) |
| Z' | 163 (6.4) | 163 (6.4) | -- | -- |

* 230 Vac models only

1.6 Removing the front cover

Models UE001 to UE018:

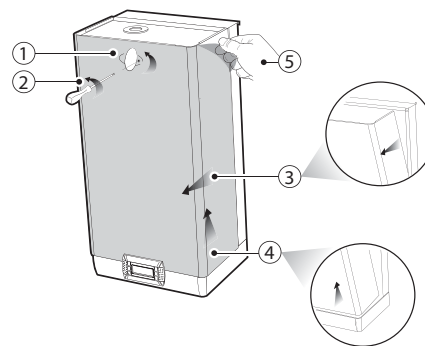


Fig. 1.e

1. turn oval-shaped label with the Carel logo, revealing the head of the earth screw below;
2. remove the screw using a screwdriver;
3. hold the cover by the sides and tilt;
4. remove the cover by moving to the bottom;
5. remove the protective film

Models UE025 to UE065:

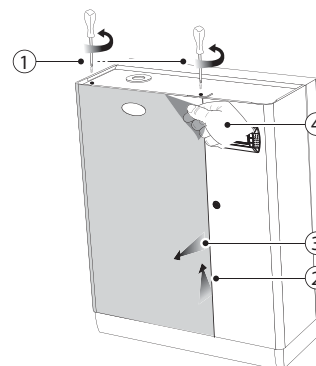


Fig. 1.f

1. remove the screws from the top of the humidifier using a screwdriver;
2. hold the cover/covers from the top and lift it around 20 mm (0.79");
3. remove the cover/covers by moving it/them forwards;
4. remove the protective film (on all the outside surfaces of the humidifier).

1.7 Fitting the front cover

Models UE001 to UE018:

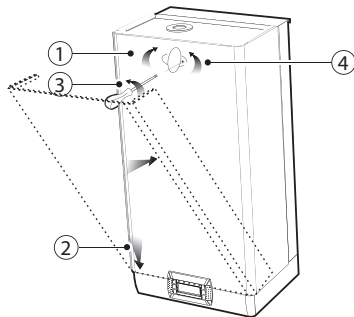


Fig. 1.g

1. turn the red oval-shaped plate with the CAREL logo, revealing the fastening hole below;
2. slip the cover onto the frame (keeping it slightly oblique), until it rests on the rear edges, paying attention to the positioning holes on the side;
3. tighten the earth screw using a screwdriver;
4. turn the red oval-shaped plate with the CAREL logo until covering the fastening hole below.

Models UE025 to UE065:

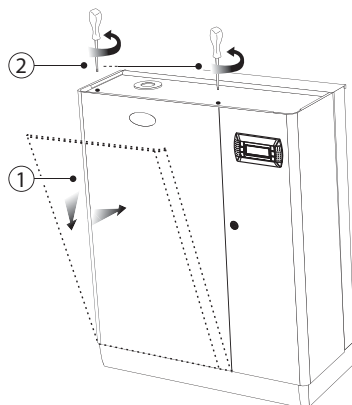


Fig. 1.h

1. slip the cover/covers onto the frame (keeping it/them slightly raised and tilted), until it rests on the rear edges;
2. tighten the screws on the top of the humidifier using a screwdriver.

⚠ Important: in models UE025 to UE065 open the electrical compartment on the humidifier using the lock with slot.

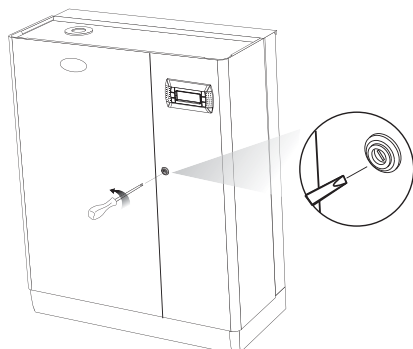


Fig. 1.i

1.8 Components and accessories

Once having opened the packaging and removed the front cover of the humidifier, make sure the following are included::



☒ kit of screws with plugs for wall-mounting



☒ kit code 98C615P003 of connectors for the electronic board.



☐ models UE001 to UE018 use fill hose connection FWH3415000, and models UE025 to UE065 use code FWHDCV0000 non-return valve with connection pipe for fill water and use code FWH3415000 for inlet drain tempering.



☒ models UE025 to UE065 only: angular plastic hose (drain water connection).

2. WATER CONNECTIONS

! Important: before proceeding, disconnect the humidifier from the power supply.

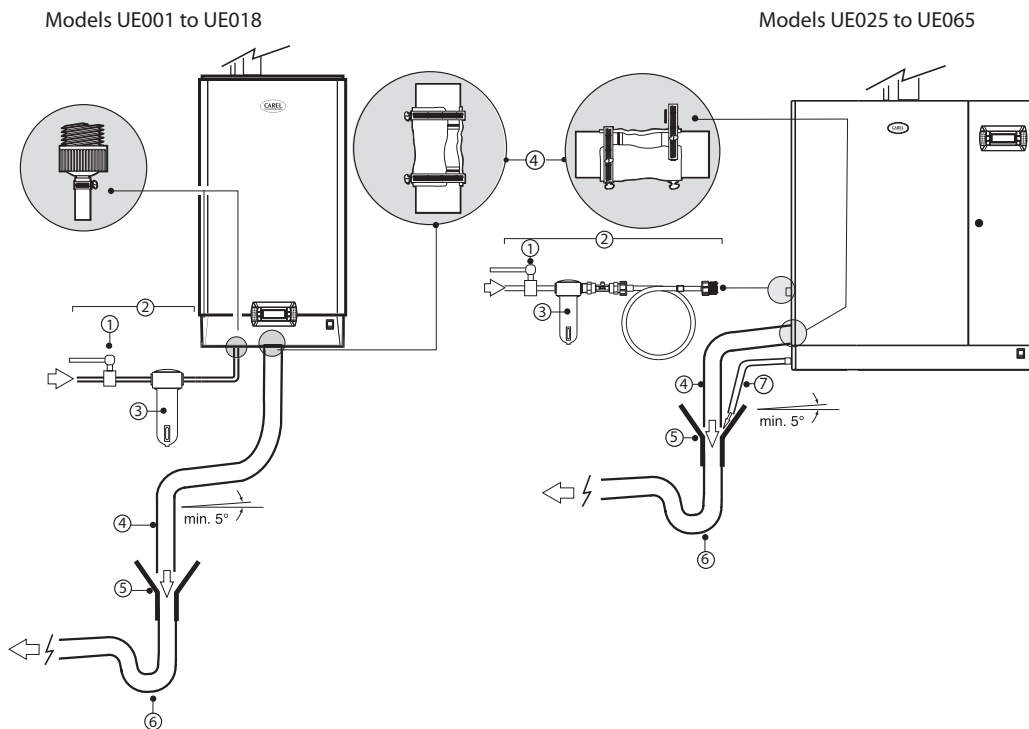


Fig. 2.a

Water connections:




- ☒ 1. install a manual valve upstream of the installation (to be able to shut off the water supply);
- ☒ 2. connect the humidifier to the water supply. On models UE001 to UE018, use a hose with 3/4"G fittings (see par. 11.2 "Technical specifications", compatible CAREL hose: code FWH3415000). On models UE025 to UE065 connect the hose with the non-return valve supplied (code FWHDCV0000) to prevent the water inside the humidifier from coming into contact with the mains water;
- ☒ 3. install a mechanical filter to trap any solid impurities (to be connected downstream of the manual valve);
- ☒ 4. connect a section of non-conductive pipe or hose for draining (resistant to temperatures of 100 °C (212 °F) and with a minimum inside diameter of 40 mm/1.6" up to UE018, and 50 mm/ 1.9" for models UE025 to UE065);
- ☒ 5. prepare a funnel to interrupt continuity in the drain line funnel for required air gap, can be composed of a piping reducer;
- ☒ 6. connect a drain trap to prevent the return of bad odours (minimum inside diameter of 40 mm/1.6" up to UE018, and 50 mm/ 1.9" for models UE025 to UE065);
- ☒ 7. in models UE025 to UE065: connect a drain hose (minimum inside diameter 15 mm (0.59")) from the bottom tank of the humidifier (this can run into the drain funnel).
- ☒ 8. in models UE025 to UE065: connect the hose code FWH3415000 for the drain tempering valve.


! Important: when installation is completed, flush the supply hose for around 30 minutes by piping water directly into the drain, without sending it into the humidifier. This will eliminate any scale or processing residues that may block the drain pump and cause foam when boiling.

Fittings provided for the water connections:

Models UE001 to UE018

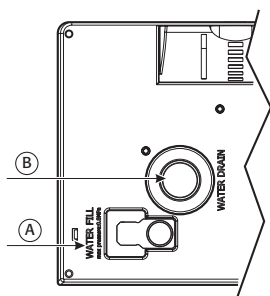

Models UE025 to UE065

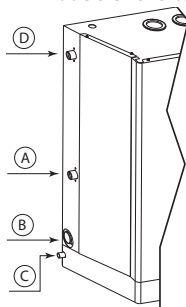

Key:


- A. supply water inlet
- B. drain water outlet
- C. bottom tank drain water outlet (models UE025 to UE065 only)
- D. supply water inlet drain tempering valve

Fig. 2.b

Hydraulic interfaces dimensions


Interfaces dimensions drain/fill

| dimensions mm (in) | UE001 to UE018 |
|--------------------|----------------|
| D | 72.6 (28.6) |
| D' | 125.4 (49.4) |
| E | 52.6 (20.7) |
| E' | 107.5 (42.3) |

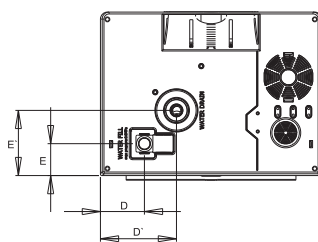


Interfaces dimensions steam outlet and condensed drain

| dimensions mm (in) | UE001 to UE018 |
|--------------------|----------------|
| F | 126.7 (50.0) |
| F' | 224 (88.2) |
| G | 137.9 (54.3) |
| G' | 21.7 (8.6) |

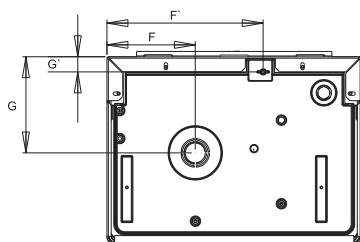


Interfaces dimensions drain/fill

| dimensions mm (in) | UE025 to UE045 | UE045* to UE065 |
|--------------------|----------------|-----------------|
| I | 40 (15.8) | |
| I' | 72 (28.3) | |
| I'' | 10.2 (4.0) | |
| L | 123.2 (48.5) | |
| L' | 231.2 (91.0) | |
| L'' | 49.1 (19.3) | |
| L''' | 678 (26.7) | 752(29.6) |

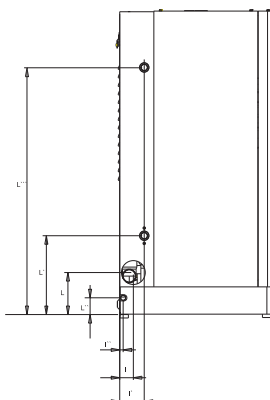

Interfaces dimensions steam outlet and condensed drain

| dimen. mm (in) | UE025 to UE045 | UE045* to UE065 |
|----------------|----------------|-----------------|
| M | 172 (67.7) | 223.7 (88.1) |
| M' | 30.2 (11.9) | 30.2 (11.9) |
| N | 181 (71.3) | 181 (71.3) |
| N' | --- | 100 (39.4) |
| N'' | 55 (21.7) | 61 (24.0) |

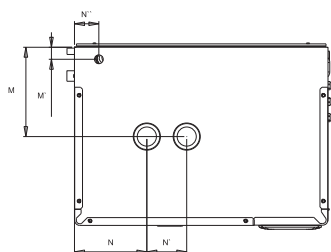

* 230 Vac models only

2.1 Supply water

Only use mains water with:

- pressure between 0.1 and 0.8 MPa (14.5 and 116 PSI), temperature between 1 and 40 °C (33.8 and 104 °F) and an instant flow-rate no lower than the rated flow of the fill solenoid valve, the connection is G3/4M (see par. "1.1.2 Technical specifications");
- range hardness 10° to 40 °f (equal to 400 ppm of CaCO₃), conductivity: 75 to 1250 µS/cm;
- no organic compounds.

| supply water characteristics | unit of measure | normal water | | water with low salt content | |
|--|------------------------|--------------------|------------------|-----------------------------|------------------|
| | | min. | max. | min. | max. |
| Hydrogen ions (pH) | | 7 | 8.5 | 7 | 8.5 |
| Specific conductivity at 20°C (σ _{R,20°C}) | µS/cm | 300 | 1250 | 75 | 350 |
| Total dissolved solids (c _a) | mg/l | (¹) | (¹) | (¹) | (¹) |
| Dry residue at 180°C (R ₁₈₀) | mg/l | (¹) | (¹) | (¹) | (¹) |
| Total hardness (TH) | mg/l CaCO ₃ | 100 ⁽²⁾ | 400 | 50 ⁽²⁾ | 150 |
| Temporary hardness | mg/l CaCO ₃ | 60 ⁽³⁾ | 300 | 30 ⁽³⁾ | 100 |
| Iron + Manganese | mg/l Fe+Mn | = | 0,2 | = | 0,2 |
| Chlorides | ppm Cl | = | 30 | = | 20 |
| Silica | mg/l SiO ₂ | = | 20 | = | 20 |
| Residual chlorine | mg/l Cl ⁻ | = | 0,2 | = | 0,2 |
| Calcium sulphate | mg/l CaSO ₄ | = | 100 | = | 60 |
| Metallic impurities | mg/l | 0 | 0 | 0 | 0 |
| Solvents, thinners, detergents, lubricants | mg/l | 0 | 0 | 0 | 0 |

Tab. 3.a

⁽¹⁾= values depend on the specific conductivity; in general:

$$C_R \cong 0.65 * \sigma_{R,20^\circ C}; R_{180} \cong 0.93 * \sigma_{R,20^\circ C}$$

⁽²⁾= not less than 200% of the chloride content in mg/l CL

⁽³⁾= not less than 300% of the chloride content in mg/l CL

There is not reliable relationship between hardness and conductivity of the water



Important:

- do not treat the water with softeners, this may cause the entrainment of foam, affecting the operation of the unit;
- do not add disinfectants or anticorrosive compounds to the water, as these are potential irritants;
- the use of well water, industrial water or water from cooling circuits and, in general, any potentially chemically or bacteriologically contaminated water is not recommended.

2.2 Drain water

this contains the same substances dissolved in the supply water, however in larger quantities;

- it may reach a temperature of 100 °C (212 °F);
- it is not toxic and can be drained into the sewerage system.

2.3 Drain tempering

The unit is fitted with a tempering valve that, opening at the same time as the drain valve, adds cold water to the drain line, thus ensuring a maximum temperature of the drain water of 60°C/140°F.

Note: The use of the drain tempering option, increase the flow rate of the drain water.

3. STEAM DISTRIBUTION

3.1 CAREL jet distributors (SDPOEM00**)

These can be fitted horizontally or vertically (hole facing upwards).
See page 31 for the models of distributors.

Assembly instructions (see Fig.3.a):

- make a series of holes on the wall according to the distributor drilling template;
- insert the distributor;
- fasten the flange using 4 screws.

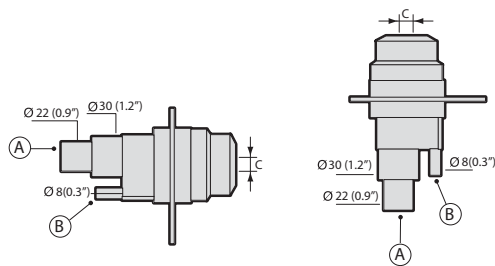
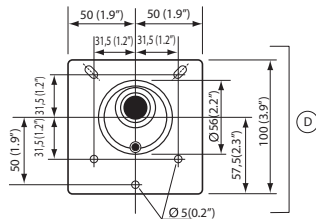


Fig. 3.a

Key:

- A. steam inlet
 - B. condensate drain
 - C. steam outlet.
- the dimensions of the hole vary depending on the models of distributor:
model SDPOEM0000: hole made manually, up to 30 mm (1.2") in diameter);
- D. drilling template

Note: if steam hoses with an inside diameter of 30 mm (1.2") are used, remove the 22 mm (0.9") steam inlet section.

3.2 CAREL linear distributors for air ducts (DP***DRU)

Install away from obstacles (curves, branches, changes in cross-section, grills, filters, fans).

Minimum distance between the distributor and the obstacle: 1/1.5 m (3.3/4.9 ft). Increase the distance if:

- the air speed increases in the duct,
- the relative humidity of the air increases before and after humidification,
- the turbulence decreases.

See page 33 for installation examples.

Assembly instructions (see Fig.3.b):

- make a series of holes on the wall according to the distributor drilling template (included in the packaging with the distributor);
- insert the distributor with the steam holes facing upward;
- fasten the flange using 4 screws.

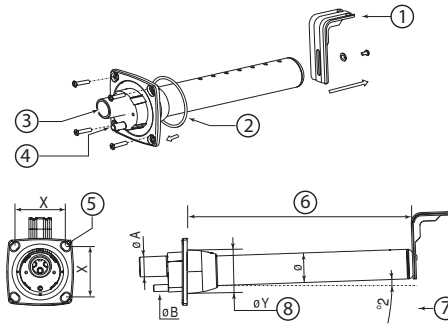


Fig. 3.b

Key:

- 1 "L"-shaped mounting support (where featured)
- 2 flange gasket
- 3 steam inlet (ØA)
- 4 condensate drain (ØB)
- 5 screw diameter (see the instruction sheet supplied with the distributor)
- 6 length (depending on the model of distributor, see par. "10.5" page 38)
- 7 angle (around 2°) for draining the condensate.
- 8 diameter of the hole on the wall (ØY)

Dimensions in mm (in)

| | CAREL linear distributors | | |
|----|---------------------------|------------|------------|
| | DP***D22RU | DP***D30RU | DP***D40RU |
| ØA | 22 (0.9") | 30 (1.18") | 40 (1.57") |
| ØB | 10 (0.4") | 10 (0.4") | 10 (0.4") |
| ØY | 58 (2.3") | 68 (2.7") | 89 (3.5") |
| Ø | 35 (1.4") | 45 (1.8") | 60 (2.4") |
| X | 68 (2.7") | 77 (3.0") | 99 (3.9") |


Tab. 3.a

Important:

1. fit the distributor at a slight incline (at least 2°, to prevent the return of condensate);
2. the "L"-shaped mounting support (see part 1 Fig. 3.c) is supplied with steam distributor models from DP085* to DP205*. For shorter lengths, the support can be supplied as an option (code 18C478A088).

3.3 CAREL steam blowers (VSDU0A*, models UE001 to UE018 only)

Steam distributors for humidifiers with flow rates up to 18 kg/h (39.7 lb/h). Can be connected on top of the humidifier, or separately in another location (see the figure below).

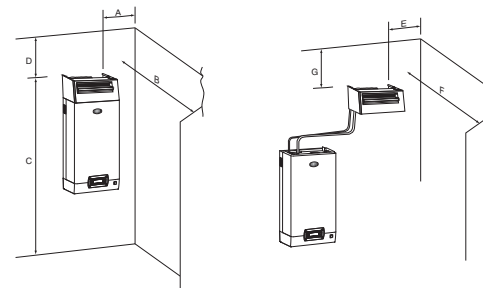

| DIMENSIONS (m) | | | | DIMENSIONS (m) | | |
|----------------|----|------|----|----------------|----|----|
| A | B | C | D | E | F | G |
| >0,5 | >5 | ≥2,1 | >1 | >0,5 | >5 | >1 |

Fig. 3.c

Important: For correct distribution of the steam, observe the distance shown in the figure above.

3.4 Steam hoses

- Use CAREL hoses (max. 4 m long, see "Models of steam hoses", page 30). Rigid pipes may break and cause steam leaks;
- avoid the formation of pockets or traps (causes of condensate);
- avoid choking the hose due to tight bends or twisting;
- fasten the end of the hose to the connectors on the humidifier and the steam distributor using metal clamps, so that these do not detach due to the high temperature;
- avoid situations that cause stress on the outlet of the steam cylinder.

3.5 Condensate drain hose


During the operation of the humidifier some of the steam may condense, causing a decline in efficiency and noise (gurgling). To drain the condensate, connect a drain hose with a drain trap and a minimum slope of 5° to the bottom of the humidifier (see Fig. 3.d). CAREL condensate drain hoses: code 1312353APG

Important: The drain trap in the condensate drain hose must be filled with water before starting the humidifier.


Example of correct and incorrect installation of the steam hose and condensate drain hose.

Final checks

- the steam outlet hoses run upwards and the distributor has a minimum incline of 2° upwards (see Fig. 3.c);
- the ends of the hose are tightened to the fittings with metal clamps;
- the curves in the tubing are sufficiently wide (radius > 300 mm / 11.8") so as to not cause bending or choking;
- the steam hose has no pockets or traps for condensate to form;
- the paths of the steam and condensate hoses are as described in this chapter (see Fig. 3.d);
- the length of the steam hose is no greater than 4 metres (13.1 feet);
- the incline of the steam hose is sufficient to allow correct draining of the condensate (> 20° for the upward sections, > 5° for the downward sections);
- the incline of the condensate hose is at least 5° at every point;
- the condensate hose always follows a downwards path and features a drain trap (filled with water before starting operation) to avoid steam being released.

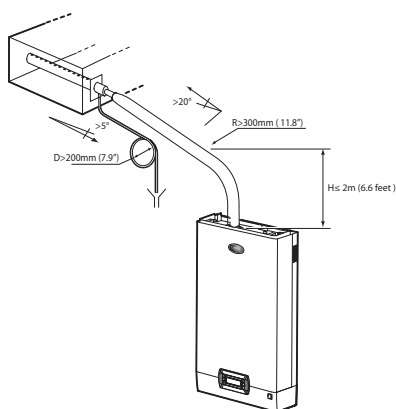

YES

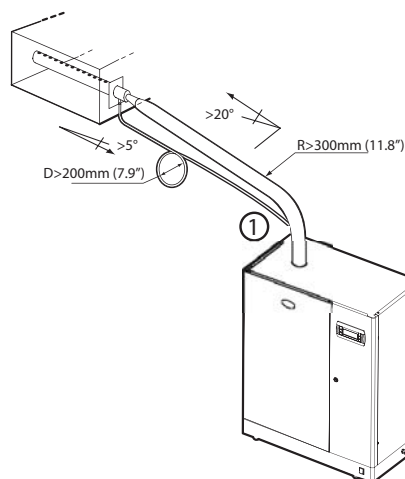


YES

All UE models

Models UE25 to UE65


(1) extend the hose inside the humidifier to the bottom tank.

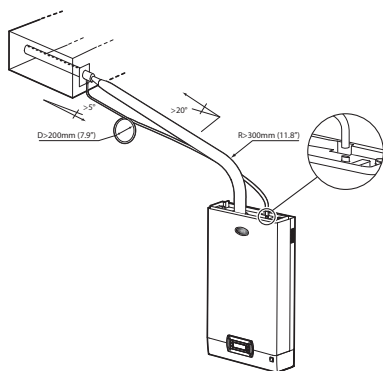

YES

Models UE001 to UE025

(1): connection with fill tank

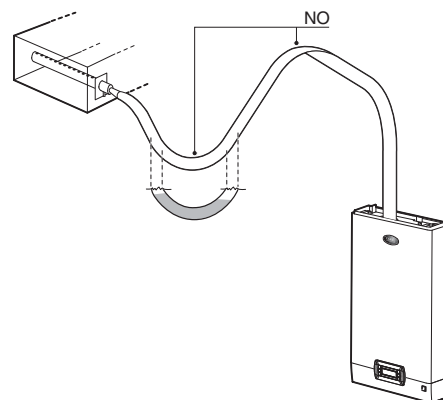

NO

All UE models

Fig. 3.d

4. ELECTRICAL CONNECTIONS

4.1 Preparing the electric cableways

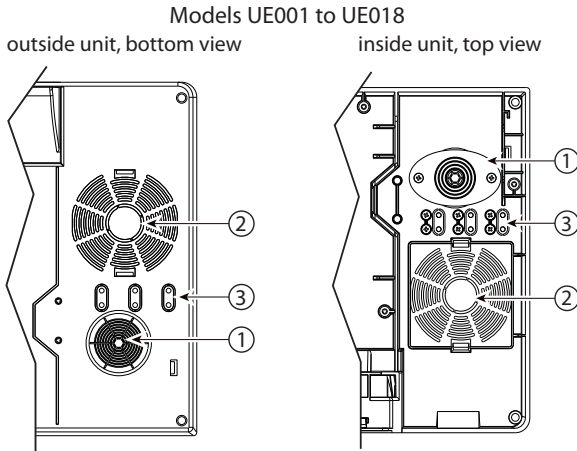


Fig. 4.a

Models UE025 to UE065
outside unit, side view

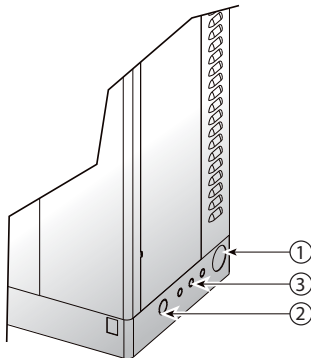


Fig. 4.b

Key to Figs. 4.a & 4.b:

1. power cable inlet;
2. optional utility cable inlet (after drilling).
3. probe cable inlet. On models UE001 to UE018, remove the plastic "tab" and use it to secure the cable (held in place by the screws provided).

4.2 Power cable connection

Before making the connections, ensure that the machine is disconnected from the mains power supply.

Check that the power supply voltage of the appliance corresponds to the value indicated on the rating plate inside the electrical panel. Insert the power and ground connection cables into the electrical panel compartment using the tear-proof cable gland supplied, or through the cable gland with cable stop, and connect the ends to the terminals (see Fig. 4.c). The humidifier power line must be fitted, by the installer, with a disconnecting switch and fuses protecting against short circuits. Table 11.a lists the recommended cross-sections of the power supply cable and the recommended fuse ratings; note, however, that this data is purely a guide and, in the event of non-compliance with local standards, the latter must prevail.

Note: to avoid unwanted interference, the power cables should be kept apart from the probe signal cables.

Single-phase models

Three-phase models

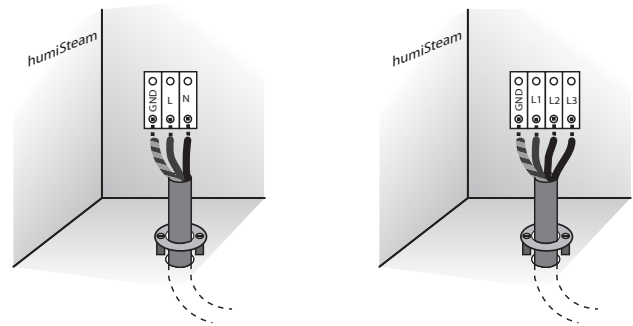


Fig. 4.c (view inside unit, electrical compartment)

Important: connect the yellow-green cable to the earth point (GND).

① In the 400 V three-phase models, also connect the neutral (N)

4.3 Steam production control signals (M2.1 - M2.7)

Depending on the type of signal used, steam production can be enabled and/or managed in different ways (ON/OFF or modulating). Steam production is enabled by keeping terminals M2.4 and M2.5 closed.

1. Enable steam production using: HUMIDISTAT (ON/OFF action)

- connect inputs M2.2 and M2.3 (production request) to a humidistat;
- jumper inputs M2.4 and M2.5 (enable);
- set parameter A0=0 to enable the ON/OFF action.

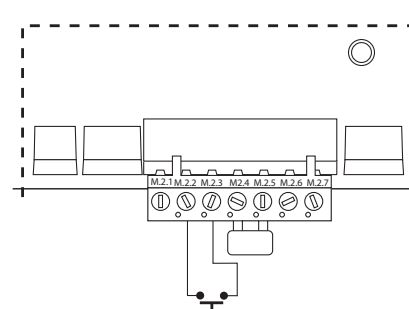


Fig. 4.d

HUMIDISTAT and REMOTE CONTACT (ON/OFF action)

- connect inputs M2.2 and M2.3 (production request) to a humidistat;
- connect inputs M2.4 and M2.5 (enable) to a remote contact (e.g.: switch, timer,...)
- set parameter A0=0 to enable the ON/OFF action.

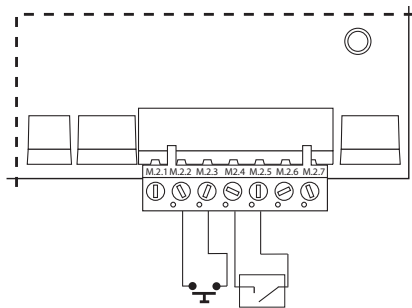


Fig. 4.e

2. Enable and control steam production using: PROPORTIONAL EXTERNAL CONTROLLER (modulating action)

- jumper inputs M2.4 and M2.5 (enable)
- connect outputs M2.2 and M2.3 (production request) to an external controller
- iset parameter A0=1 to enable the modulating action (see chap. 7) and parameter A2 depending on the signal chosen (0 to 10V, 2 to 10V, 0..20mA, 4 to 20 mA) (see chap. 7).

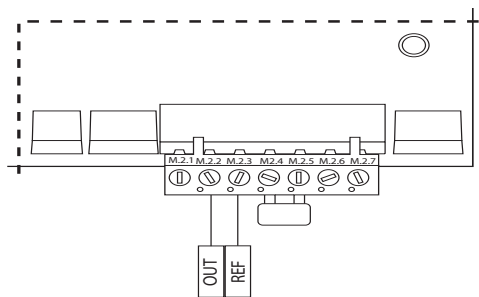


Fig. 4.f

PROPORTIONAL EXTERNAL CONTROLLER and REMOTE CONTACT (modulating action)

- connect inputs M2.4 and M2.5 to a remote contact (enable)
- connect outputs M2.2 and M2.3 (request) to an external controller
- set parameter A0=1 to enable the modulating action (see chap. 7) and parameter A2 depending on the signal chosen (0 to 10V, 2 to 10V, 0...20V, 4 to 20 mA) (see chap. 7).

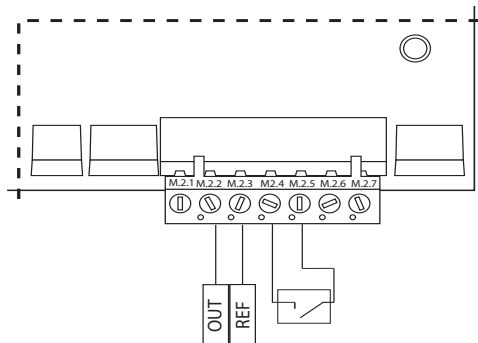


Fig. 4.g

Note: in industrial environments (IEC EN61000-6-2) the signal cables running from the unit must not exceed 10 m (33 ft)⁽¹⁾ in length: steam production signal cable (terminals M2.1...M2.3), remote on/off input (terminals M2.4...M2.5) and cable shields for RS485 communication.

4.4 Alarm contact (M5.1 - M5.2)

Contact available for the remote signalling of one or more alarms.

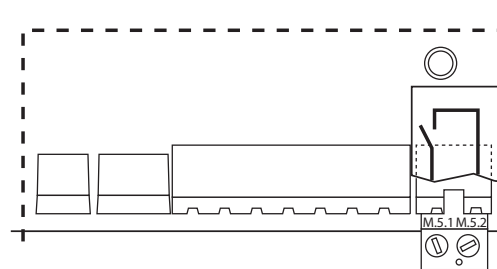



Fig. 4.h

Electrical specifications: 250 Vac; I_{max}: 2 A resistive 2 A inductive.

Note: use clamps on the relay terminal blocks (alarm, utilities) to prevent the cables from being detached.

4.5 Auxiliary contact: production request present, external fan control (M14.1 - M14.3)

Relay contact that indicates the presence of the steam production request. It can also be used to control an external fan (see chap. 12.7)

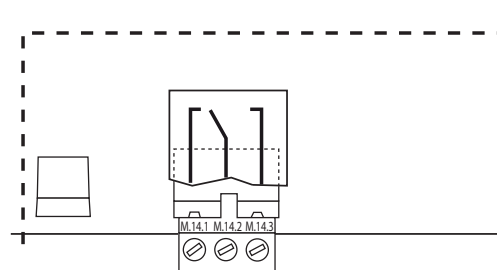

Electrical specifications: 250 Vac; I_{max}: 8 A resistive 2 A inductive.

Final checks

The following conditions represent correct electrical connection:

- the rated voltage of the appliance corresponds to the rated supply voltage;
- the fuses installed are suitable for the line and the power supply voltage;
- a mains disconnect switch has been installed to disconnect power to the humidifier when required;
- the humidifier has been correctly earthed;
- the power cable is fastened using the tear-proof cable gland;
- terminals M2.4 and M2.5 are jumpered or connected to an enable-operation contact;
- if the humidifier is controlled by an external control device, the earth of the signal is electrically connected to the controller earth.

5. REMOTE TERMINAL AND SUPERVISORY NETWORK

5.1 Remote display terminal

The display terminal can be detached from the humidifier and moved up to 30 m (98 feet) away.

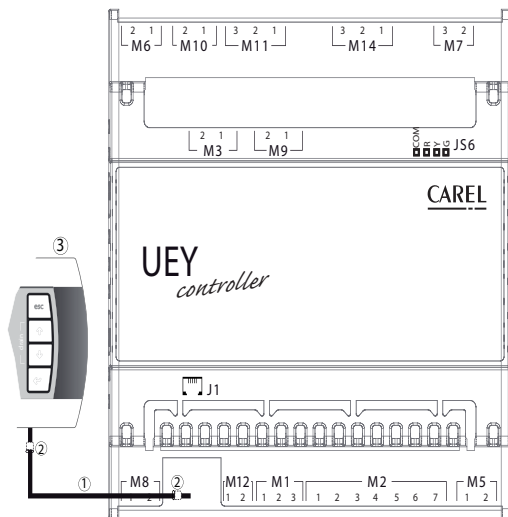


Fig. 5.a

Key:

- 1 telephone cable 6 wires (up to 10 m (33 ft)⁽¹⁾ distance);
- 2 two EMC filters (code 0907858AXX) to be applied to the ends of the telephone cable;
- 3 remote display terminal.

Note: to fill the empty space left by the display terminal on the humidifier, use CAREL kit code HCTREW0000.

⁽¹⁾ For lengths greater than 10 m (33 ft) use shielded cable with the shield connected to PE both on the terminal side and the controller side

5.2 RS485 supervisory network (M1.1-M1.3)

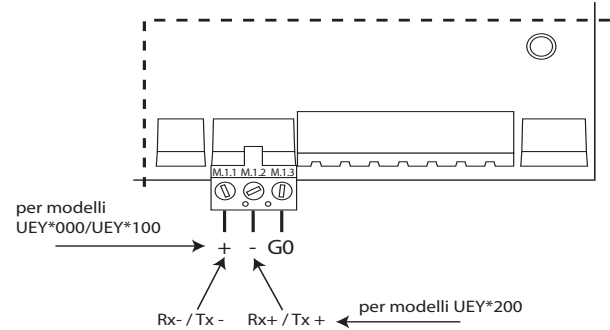



Fig. 5.b


Important: for the RS485 connections in household (IEC EN 55014-1) and residential (IEC EN 61000-6-3) environments, use shielded cable (with shield connected to PE both on the terminal side and the controller side) with maximum shielded cable length: specified by the EIA RS485 protocol, equivalent to European standard CCITT V11, using shielded twisted pair cable, AWG26, 485 input stage impedance 1/8 unit-load (with this configuration, a maximum of 256 devices can be connected) laid in separate conduits from the power cables

6. STARTING AND USER INTERFACE


Before starting the humidifier, check:

-  water connections: chap. 2. In the event of water leaks do not start the humidifier before having resolved the problem;
- steam distribution: chap. 3 and electrical connections chap. 4.

6.1 Starting

- 1  ON
- 2 if the cylinder is new, run a pre-wash cycle by pressing ENTER + DOWN for 5 sec. (the cylinder is filled and emptied three times, cleaning the inside walls from impurities). A display shows the symbol PRE Cln

6.2 Stopping

- 1 empty the water in the cylinder to avoid stagnation (see paragraph 6.6 "Manually drain the water in the cylinder").
- 2  OFF

6.3 Display

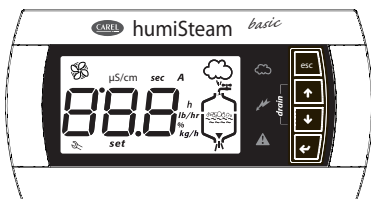








Fig. 6.a

- Key:
-  **drain** manually drain the cylinder (see paragraph 6.6)
 -  power supply (green LED)
 -  humidifier operating (yellow LED)
Flashing: steam production not yet in steady operation
Steady: steam production in steady operation
 -  alarm (red LED, not flashing)
Alarm activated: LED flashing and buzzer active
If an alarm is active pressing ESC mutes the buzzer and the LED comes on steady, pressing ESC again resets the alarms (see Chap. 8)
 - μS/cm** conductivity value
 - sec** time in seconds
 - A** instant current value in Amperes
 - h** real hour counter
 - lb/hr** steam flow-rate (Imperial system)
 - %** steam production as a percentage of rated capacity
 - kg/h** steam flow-rate (international system, default)
 - set** parameter programming in progress (parameter setup)
 -  maintenance request (alarm active) or display alarm log (HYS)
 -  on steady: external fan or steam production active.
Flashing: external fan or steam production awaiting start/stop

888

3 digits, after 999 the display shows 100 to indicate 1000 (only three digits plus point - between the first and the second digit- are displayed).



- steam production in progress
- cylinder filling in progress
- foam in the cylinder
- presence water in the cylinder
- cylinder water drain in progress


6.4 Keypad

| key | function |
|----------------------|---|
| Esc | return to the previous display from the main screen: pressed for 5 seconds disables/enables the humidifier |
| ↑ UP | from the main screen: display the humidification values (current, conductivity,...), see the following paragraph from the list of parameters: circular navigation of the parameters and set the values |
| ↓ DOWN | from the main screen: display the humidification values (current, conductivity,...) from the list of parameters: circular navigation of the parameters and set the values |
| ← ENTER (PRG) | for 2 seconds: access the list of parameters from the list of parameters: select and confirm (like the "Enter" key on a computer keyboard) |

6.5 Main display

The display on the humidifier normally shows the current steam production (kg/h, basic display).

To display other values, press UP or DOWN and scroll the following list:

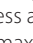- input signal (0-100%, or ON/OFF if A0=0)
- access alarm log (HYS ) (**)
- set maximum steam production (parameter P0) (*)
- current (A)
- conductivity (μS/cm)
- cylinder hour counter (h)

To return to the basic display, press ESC.

Parameter C0 (see chap. 7) can be used to change the value of the basic display (default: current steam production).

(*) To modify the maximum steam output (P0) press:

- ENTER (display: **set**)
 - UP or DOWN to set the value percentage of production (from 20 to 100%)
 - ENTER to confirm the new value
- Press ESC to return to the main screen
Parameter P0 can also be accessed from the list of parameters (see chap. 7).

(**) To display the alarm log (HYS ) press:

- ENTER (the most recent alarm is shown)
 - UP or DOWN to scroll the list of alarms in chronological order
- press ESC to return to the main screen
To delete the list of alarms press UP and DOWN for 5 seconds (inside the alarm log), when the list has been reset the display will show 'res'.

6.6 Disabling

The humidifier can be disabled in 3 different ways:

- Opening contact M2.4 and M2.5 (enable) : the display shows C--
- From serial (see Chap. 7 Digital 2) : the display shows S--
- From terminal (see ESC button) : the display shows t--

6.7 Recalling the manufacturer defaults

From the main screen press ENTER until the password screen is shown:

- Enter the password 50
- The message dEF is displayed, flashing

Confirm by pressing ENTER or exit by pressing ESC

If no button is pressed for 30 seconds, the display returns to the main screen.

6.8 Visualization release Software

1) when switch-on the unit to display "rel. x.y"(example rel. 1.0)

2) during operation

a) to display: by main mask press ESC and UP appear in sequence: the size dell'umidificatore, the voltage, the number of phases and the software release

b) the network by means of variable whole 81. Es. format = # # #. # "(eg., 12 = release 1.2)"

6.9 Match digit (match between the softwares of board and terminal)

humiSteam basic verifies the matching between the softwares of the controller and the terminal at the start-up. The 8th digits for board and 9th for terminal of both codes must be equal.

If there is no match, on power-up after displaying the software release, and in normal operation when pressing UP+PRG, the red LED will remain on for 5 seconds, and the following error message will be displayed:

"X - Y", where "X" and "Y" are the 2 different 8th digits. Refer to the after-sales service.

6.10 Reset cylinder hour counters

- Access parameter 'da' (see chap. 7)
- press UP and DOWN for 5 seconds

When the counter has been reset, the display shows 'res'.

6.11 Parameters: Saving/recalling the user settings

From the main screen, a copy of the user settings can be saved at any time, and then later recalled.

To save the settings::

From the main screen press:

- ENTER for 2 seconds,
- enter the password 51 using the UP or DOWN button and press ENTER, the message UbP (Backup User parameters)
- press ENTER: the message -L- is displayed, flashing
- press UP or DOWN, the message -S- (Save) is displayed, flashing,
- press ENTER to save a copy of the user settings, or press ESC to cancel the operation

NOTE: the copy of the user parameters saved previously will be overwritten with current user settings.

To recall the settings::

From the main screen press:

- ENTER for 2 seconds,
- enter the password 51 using the UP or DOWN button and press ENTER, the message UbP (Backup User parameters)
- press ENTER: the message -L- (Loading) is displayed flashing,
- press ENTER to recall the previously saved copy of the user settings, or press ESC to cancel the operation.

If no button is pressed for 30 seconds, the display returns to the main screen, without performing the operation.

6.12 Manually drain the water in the cylinder

Total drain in operation

Press UP and DOWN together for 2 seconds (the message 'dr' on the display alternating with 'tot' indicates the function has been activated). Press UP and DOWN again for 2 seconds to stop the drain cycle. The drain cycle in any case ends automatically.

7. CONFIGURATION PARAMETERS

7.1 Accessing and setting the parameters

The configuration parameters are used to select and control the functions and the status of the humidifier.

From the main screen press:

- ENTER for 2 seconds,
- enter the password 77 using UP or DOWN,
- ENTER to confirm and access the list of parameters,
- UP or DOWN to scroll the list cyclically,

- ENTER to select a parameter (display: 'set'),
- UP to modify (increase) the value of the parameter. To scroll the values faster press UP together with DOWN,
- DOWN to modify (decrease) the value of the parameter. To scroll the values faster press DOWN together with UP,
- ENTER to save the new value and return to the list of parameters, or ESC to return to the list without saving the new value, Press ESC to return to the main screen.

7.2 Basic parameters

| Parameter | | UOM | range | def | notes |
|-----------|---|-----|-----------|-----|---|
| P0 | maximum production (also see paragraph 6.5) | % | 20 to 100 | 100 | |
| A0 | operating mode 0= ON/OFF control 1= proportional | - | 0 to 1 | 1 | |
| A1 | unit of measure 0= kg/h; 1= lb/h | - | 0 to 1 | 0 | |
| A2 | type of production request signal (the parameter can be displayed when A0=1) 1=0...10 V; 2= 2...10 V; 3= 0...20 mA; 4= 4...20 mA | - | 1 to 4 | 1 | |
| A6 | Relay M14 activation delay for signalling presence of steam production request / activating external fan | s | 0 to 300 | 0 | Visible only if function activated (parameter b1, see par 11.6) |
| A7 | Relay M14 deactivation delay for signalling presence of steam production request / deactivating external fan | s | 0 to 300 | 180 | Visible only if function activated (parameter b1, see par 11.6) |
| C0 | value normally displayed 1= input/control signal; 2= steam prod.; 3= hour counter; 4= conductivity; 5= current | - | 1 to 5 | 2 | |

7.3 Advanced parameters

| Parameter | | UOM | range | def | notes |
|-----------|---|-------|------------|------|---|
| b1 | optional functions (see paragraph 11.6) | - | 0 to 127 | 0 | |
| b2 | delay time when shutting down | s | 0 to 120 | 0 | |
| b4 | Override conductivity of the water 0= automatic measurement | µS/cm | 0 to 1250 | 0 | Visible only if function activated (parameter b1, see par 11.6) |
| b5 | conductivity pre-alarm threshold (*) | µS/cm | 0 to 2000 | 1500 | |
| b6 | conductivity alarm threshold (*) | µS/cm | 0 to .2000 | 2000 | |
| b7 | foam threshold setting 0= no foam detection; 1= max. foam detection sensitivity; 100= min. foam detection sensitivity | % | 0 to 100 | 50 | |
| b8 | conductivity setting inside the cylinder in steady operation compared to rated value | % | 50 to 200 | 100 | |
| b9 | duration of the drain to dilute cycle | % | 50 to 200 | 100 | |
| bb | cylinder maintenance limit time (in hours) 0= the cylinder life alarm "Cy" and maintenance required alarm "Mn" are not shown (*) | h | 0 to 4000 | 3000 | |
| bE | time limit between two periodical drain cycles (if periodical drain is enabled, b1 = 64) | h | 1 to 240 | 24 | |
| bf | days delay for drain due to inactivity (if the drain due to inactivity has been disabled, 8 set for b1) | days | 1 to 199 | 3 | |

(*) after 999 the display shows **1000** to indicate 1000 (only three digits plus point

- between the first and the second digit- are displayed).

7.4 Serial connection parameters

| Parameter | | UOM | range | def | notes |
|-----------|---|---------------------|------------|-----|---------------------|
| C3 | serial address | - | 1 to 207 | 1 | |
| C4 | baud rate: 0= 9,600; 1= 19,200 | - | 0 to 1 | 0 | |
| C5 | supervisor: frame (character bits, parity, stop bits) 0=8,N,2 1=8,N,1 2=8,E,2 3=8,E,1 4=8,O,2 5=8,O,1 6=7,N,2 7=7,N,1 8=7,E,2 9=7,E,1 10=7,O,2 11=7,O,1 | | 0 to 11 | 0 | |
| C6 | serial response transmission delay | ms | 0 to 199 | 0 | |
| C7 | protocollo: 0= supervisione CAREL; 1=Modbus® | - | 0..1 | 0 | |
| C8 | maximum time with no data (sent to controller) over RS485 to generate stop production and "SU" alarm | 0.1s (ex: 50=5s) | 0 to 300.0 | 5.0 | see variable "I" 62 |





7.5 Read-only parameters


| Parameter | | UOM | range | def | notes |
|-----------|---|-------|------------|-----|-------|
| d1 | display signal measured by external controller (only if A0=1) | % | 0.0 to 199 | - | |
| d3 | display steam production (instant value) | kg/h | 0.0 to 199 | - | |
| d5 | conductivity of the supply water (*) | µS/cm | 0 to 1500 | - | |
| d6 | current | A | 0.0 to 199 | - | |
| d7 | display maximum production (related to P0 set range) | kg/h | 0.0 to 199 | - | |
| d9 | rated steam production | kg/h | 0.0 to 199 | - | |
| da | cylinder hour counter (resettable) | h | | | |
| db | unit hour counter (read only) | h | | | |

(*) after 999 the display shows **1000** to indicate 1000 (only three digits plus point

- between the first and the second digit- are displayed).

8. ALARMS

| code display and symbol | | var. code l89 | meaning | causes | solution | reset (press) | alarm relay activation | effect | red LED signal on board (*) (if terminal not connected) |
|-------------------------|---|---------------|---|---|---|---|---------------------------------|--|---|
| E0 | - | 1008Hex | calibration parameter software verification error | internal memory error | if the problem persists, contact the CAREL service center | -- | yes | humidification stopped | 3 fast flashes |
| E1 | - | 1004Hex | parameter configuration error | error in the parameters user | if the problem persists, contact the CAREL service center | -- | yes | humidification stopped | 4 fast flashes |
| EH | A | 1010Hex | excess current | over-current at the electrodes; probable electrode malfunction or water conductivity temporarily too high (especially when starting after a short stop) | 1. check the operation of the drain pump 2. check the seal of the fill electrovalve when not energised 3. drain part of the water and re-start | AUTO | yes | humidification stopped | 2 fast flashes |
| EP |  | 1020Hex | no production | excessive reduction in production, or cylinder completely depleted or water | Perform maintenance on the cylinder | ESC | yes | humidification stopped | 4 slow flashes |
| CY |  | 3001Hex | cylinder life pre-alarm | the cylinder full limit of 1500 h (default) | perform maintenance and/or replace the cylinder | ESC (the alarm is reactivated after 50 hrs) | no | signal only | 7 fast flashes |
| EF |  | 2004Hex | no water | | Check: • water supply and fill valve; • whether the manual drain is open; • blockage of the filter on the fill solenoid valve; • whether there is excessive backpressure in steam outlet, preventing the flow of water into the cylinder by gravity; • that the steam outlet hose is not choked or that there are no pockets of condensate; • that the power cables are connected to the cylinder | automatic (after 10 minute waiting time) | yes (in 10 minute waiting time) | humidification stopped for 10 minutes only | 3 slow flashes |
| Ed |  | 2008Hex | failed drain | | check the drain pump and drain connection | ESC | yes | humidification stopped | 5 slow flashes |
| CP |  | 3004Hex | cylinder being depleted signal | | cylinder life ending, perform maintenance and/or replace the cylinder | AUTO | no | signal only | 6 slow flashes |
| CL |  | 3008Hex | cylinder depleted signal | | cylinder life ended, perform maintenance and/or replace the cylinder | AUTO | no | signal only | 10 slow flashes |
| EA |  | 3002Hex | foam | excessive foam in the cylinder during boiling. the formation of foam is generally due to the presence of surfactants in the water (lubricants, solvents, detergents, water treatment agents, softeners) or an excessive concentration of dissolved salts. | 1. drain the water supply lines 2. clean the cylinder 3. check for the presence of softeners (in this case, use another type of water or reduce the softening) | ESC | no | signal only | 9 slow flashes |
| E2 | | 3010Hex | memory backup fails | internal memory error | if the problem persists, contact the CAREL service center | -- | no | signal only | 6 fast flashes |
| Mn |  | 1001Hex | end of cylinder life | | the cylinder has exceeded the limit of 2000 hours, replace the cylinder | reset hour counter | yes | humidification stopped | 8 fast flashes |

| code display and symbol | var. code l89 | meaning | causes | solution | reset (press) | alarm relay activation | effect | red LED signal on board (*) (if terminal not connected) |
|--|---------------|--|--|--|---------------|------------------------|-------------------------------|---|
| EU  | 2001Hex | cylinder full | excessive water level when unit producing steam | with the machine off: 1. check for any leaks from the fill electrovalve or the condensate return pipe 2. check that the level sensors are clean total shut-down pipe 2. check that the level sensors are clean total shut-down | -- | no | signal only | 8 slow flashes |
| EC $\mu\text{S}/\text{cm}$ | 1002Hex | high conductivity | high supply water conductivity | 1. check water conductivity 2. if the problem persists, change the source of supply water or install a suitable treatment system (demineralisation, even partial). N.B.: the problem will not be resolved by softening the supply water. | AUTO | no (b5) yes (b6) | signal only humid. stopped | 5 fast flashes |
| E3 - | 2002Hex | failed connection of modulating signal | Cable interrupted / disconnected / improperly connected. | check the reference signal in 4 to 20 mA or 2 to 10V mode) | AUTO | yes | humidification stopped | 7 slow flashes |
| SU | 2040Hex | serial disconnected | | | AUTO | | | 2 slow flashes |
| Pre/Cln - | | cylinder cleaning started signal | | | -- | -- | -- | none |
| dr - | | cylinder drain activated | | | -- | -- | -- | none |
| dr / TOT - | | complete drain due to inactivity | | | -- | | -- | (both codes alternate on display) |
| AF  | | antifoam active | | | -- | -- | -- | none |

Press ESC once to mute the buzzer, press ESC a second time to reset the alarm.

(*) Quick flash: 0.2 seconds ON and 0.2 seconds OFF

Slow flash: 1 second ON and 1 second OFF

9. MAINTENANCE AND SPARE PART

9.1 Spare parts for models UE001 to UE018

Key to Figs. 9a & 9.b:

- 1 fill tank
- 2 internal tubing kit
- 3 fill solenoid and drain tempering valve kit
- 4 cylinder
- 5 manifold with drain pump
- 6 plastic base
- 7 plastic humidifier top
- 8 TAM (transformer for measuring the current)
- 9 transformer
- 10 contactor
- 11 fuse holder F1-F2
- 12 electronic controller
- 13 power terminals
- 14 fuse holder F3
- 15 switch
- 16 terminal with display

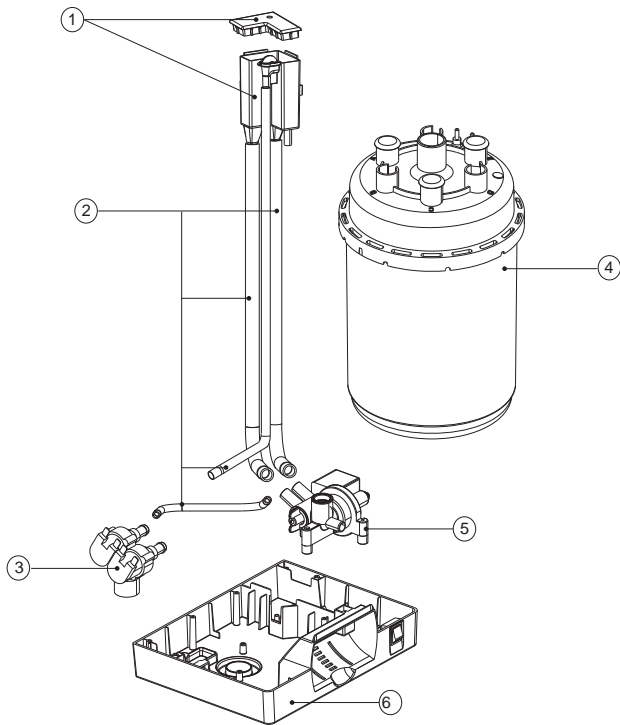


Fig. 9.a

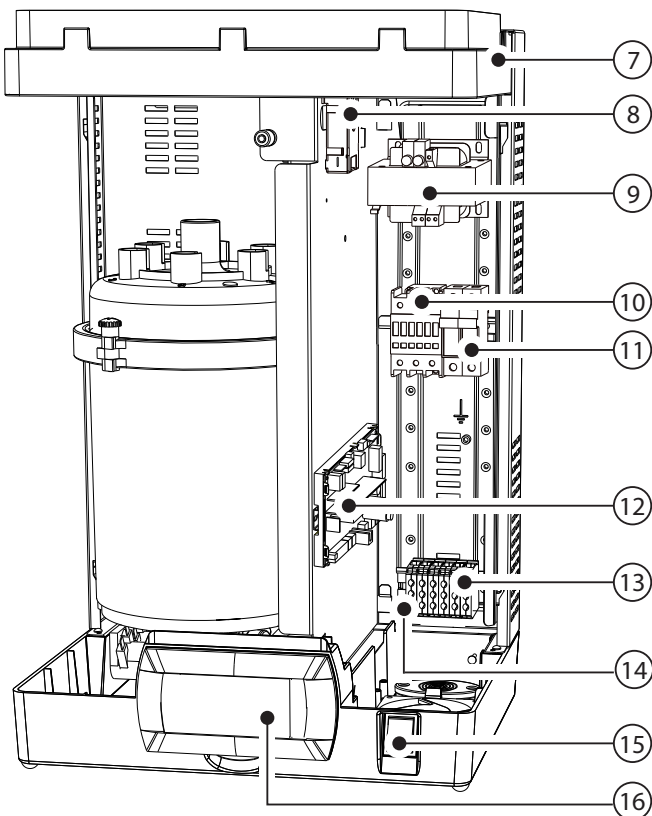


Fig. 9.b

Table of water circuit, electrical and electronic spare parts, UE001 to UE018

| | UE001 | UE003 | UE005 | | UE008 | UE009 | UE010 | UE015 | UE018 | position | fig. |
|---|---------------------------|------------|-------------|----------------------------|-------|------------|-------|-------|-------|----------|---------------------|
| | | | 460-575 3ph | 208-230 1ph 208-230 3ph | | | | | | | |
| Water circuit | | | | | | | | | | | |
| Fill tank + conductivity meter | UEKVASC100 | | | | | | | | | 1 | 9.a |
| fill solenoid and drain tempering valve kit | KITFD11206 | | | | | KITFD11211 | | | | 3 | 9.a |
| Internal tubing kit | UEKT20000M | | | | | | | | | 2 | 9.a |
| Plastic humidifier base | UEKBOTTOM0 | | | | | | | | | 6 | 9.a |
| Plastic humidifier top | UEKT0P0000 | | | | | | | | | 7 | 9.b |
| Assembled f/d manifold + 230V pump | UEKDRAIN02 | | | | | | | | | 5 | 9.a |
| Electrical and electronics | | | | | | | | | | | |
| Display terminal | HCTLEYW0w0 ⁽³⁾ | | | | | | | | | 16 | 9.b |
| TAM (current transformer) | UEKTAM0000 | | | | | | | | | 8 | 9.b |
| Contactor | UEKCONT100 | UEKCONT200 | UEKCONT100 | UEKCONT200 | | | | | 10 | 9.b | |
| Power transformer: 208-230-460-575/24 V | UEKTR30000 | | | | | | | | | 9 | 9.b |
| Electronic controller ⁽¹⁾ | UEYxxv0z0j ⁽²⁾ | | | | | | | | | 12 | 9.b |
| Fuse carrier (F1,F2) | URKFH10000 | | | | | | | | | 11 | 9.b |
| Fuse carrier (F3) | UEKFH10000 | | | | | | | | | 14 | 9.b |
| F1 - F2 power fuses | URKFUSE100 | | | | | | | | | - | see electrical draw |
| F4 Transformer secondary fuse | URKFUSE500 | | | | | | | | | - | see electrical draw |
| F3 Pump fuse | UEKFUSE200 | | | | | | | | | - | see electrical draw |
| Connection cable between terminal and electronic controller | S90CONN002 | | | | | | | | | - | |

Tab. 9.a

(1) when ordering, as well as the controller code specify the complete code and serial number of the humidifier.

(2) xx: kg/h (01,.....65)

v: power supply (D=230V 1ph, M=460V 3ph, etc)

z: match digit board (8th code number of the card)

i: 0 single package / 1 multiple package

(3) w: match digit terminal (9th code number of the terminal)

Table of spare part codes, Single-phase cylinders UE001 to UE009, electrode and gasket kit

| Model | UE001 | UE003 | UE005 | UE009 | |
|-------------------------------|--|------------|------------|------------|------------|
| STANDARD disposable cylinders | 208/230 Vac 1~, conductivity 350 to 1250 µS/cm | BLOS1F00H2 | BLOS1F00H2 | BLOS2E00H2 | BLOS3F00H2 |
| SPECIAL disposable cylinders | 208/230 Vac 1~, conductivity 75 to 350 µS/cm | BLOS1E00H2 | BLOS1E00H2 | BLOS2E00H2 | BLOS3E00H2 |
| SPECIAL openable cylinders | 208/230 Vac 1~, conductivity 75 to 350 µS/cm | BLCS1E00W2 | BLCS1E00W2 | BLCS2E00W2 | BLCS3E00W2 |
| Electrode and gasket kit | 208/230 Vac 1~, conductivity 350 to 1250 µS/cm | BLCS1F00W2 | BLCS1F00W2 | BLCS2E00W2 | BLCS3F00W2 |
| | 208/230 Vac 1~, conductivity 75 to 350 µS/cm | KITBLCS1E2 | KITBLCS2E2 | KITBLCS2E2 | KITBLCS3E2 |
| Filter gasket kit | 208/230 Vac 1~, conductivity 350 to 1250 µS/cm | KITBLCS1F2 | KITBLCS2F2 | KITBLCS2E2 | KITBLCS3F2 |
| | | KITBLC1FG0 | KITBLC2FG0 | KITBLC2FG0 | KITBLC3FG0 |

Tab. 9.b

Table of spare part codes, three-phase cylinders UE003 to UE018, electrode and gasket kit

| Model | UE003 | UE005 | UE008 | UE010 | UE015 | UE018 | |
|--|--|------------|------------|------------|------------|------------|------------|
| STANDARD disposable cylinders | 208/230 VAC 3~, conductivity 350 to 1250 µS/cm | BL0T1B00H2 | BL0T2A00H2 | BL0T2A00H2 | BL0T3A00H2 | BL0T3A00H2 | -- |
| | 460 VAC 3~, conductivity 350 to 750 µS/cm | BL0T1D00H2 | BL0T2D00H2 | BL0T2D00H2 | BL0T3D00H2 | BL0T3D00H2 | BL0T3D00H2 |
| | 575 VAC 3~, conductivity 350 to 750 µS/cm | | BL0T2D00H2 | BL0T2D00H2 | BL0T3D00H2 | BL0T3D00H2 | BL0T3D00H2 |
| SPECIAL disposable cylinders | 208/230 VAC 3~, conductivity 75-350 µS/cm | BL0T1A00H2 | BL0T2A00H2 | BL0T2A00H2 | BL0T3A00H2 | BL0T3A00H2 | -- |
| | 460 VAC 3~, conductivity 75 to 350 µS/cm | BL0T1B00H2 | BL0T2C00H2 | BL0T2C00H2 | BL0T3C00H2 | BL0T3C00H2 | BL0T3C00H2 |
| | 460 VAC 3~, conductivity 750 to 1250 µS/cm | BL0T1D00H2 | BL0T2D00H2 | BL0T2D00H2 | BL0T3D00H2 | BL0T3D00H2 | BL0T3D00H2 |
| | 575 VAC 3~, conductivity 75 to 350 µS/cm | | BL0T2C00H2 | BL0T2C00H2 | BL0T3C00H2 | BL0T3C00H2 | BL0T3C00H2 |
| | 575 VAC 3~, conductivity 750 to 1250 µS/cm | | BL0T2D00H2 | BL0T2D00H2 | BL0T3D00H2 | BL0T3D00H2 | BL0T3D00H2 |
| SPECIAL openable cylinders | 208/230 VAC 3~, conductivity 75-350 µS/cm | BLCT1A00W2 | BLCT2A00W2 | BLCT2A00W2 | BLCT3A00W2 | BLCT3A00W2 | -- |
| | 460 VAC 3~, conductivity 75 to 350 µS/cm | BLCT1B00W2 | BLCT2C00W2 | BLCT2C00W2 | BLCT3C00W2 | BLCT3C00W2 | BLCT3C00W2 |
| | 460 VAC 3~, conductivity 350 to 750 µS/cm | BLCT1D00W2 | BLCT2D00W2 | BLCT2D00W2 | BLCT3D00W2 | BLCT3D00W2 | BLCT3D00W2 |
| | 460 VAC 3~, conductivity 750 to 1250 µS/cm | BLCT1D00W2 | BLCT2D00W2 | BLCT2D00W2 | BLCT3D00W2 | BLCT3D00W2 | BLCT3D00W2 |
| | 575 VAC 3~, conductivity 75 to 350 µS/cm | | BLCT2C00W2 | BLCT2C00W2 | BLCT3C00W2 | BLCT3C00W2 | BLCT3C00W2 |
| | 575 VAC 3~, conductivity 350 to 750 µS/cm | | BLCT2D00W2 | BLCT2D00W2 | BLCT3D00W2 | BLCT3D00W2 | BLCT3D00W2 |
| | 575 VAC 3~, conductivity 750 to 1250 µS/cm | | BLCT2D00W2 | BLCT2D00W2 | BLCT3D00W2 | BLCT3D00W2 | BLCT3D00W2 |
| Electrode and gasket kit | Electrode kit 208/230 Vac 3~, 75/350 µS/cm | KITBLCT1A2 | KITBLCT2A2 | KITBLCT2A2 | KITBLCT3A2 | KITBLCT3A2 | -- |
| | Electrode kit 208/230 Vac 3~, 350/1250 µS/cm | KITBLCT1B2 | KITBLCT2A2 | KITBLCT2A2 | KITBLCT3A2 | KITBLCT3A2 | -- |
| | Electrode kit 460 Vac 3~, 75/350 µS/cm | KITBLCT1B2 | KITBLCT2C2 | KITBLCT2C2 | KITBLCT3C2 | KITBLCT3C2 | KITBLCT3C2 |
| | Electrode kit 460 Vac 3~, 350/750 µS/cm | KITBLCT1D2 | KITBLCT2D2 | KITBLCT2D2 | KITBLCT3D2 | KITBLCT3D2 | KITBLCT3D2 |
| | Electrode kit 460 Vac 3~, 750/1250 µS/cm | KITBLCT1D2 | KITBLCT2D2 | KITBLCT2D2 | KITBLCT3D2 | KITBLCT3D2 | KITBLCT3D2 |
| | Filter gasket kit | KITBLC1FG0 | KITBLC2FG0 | KITBLC2FG0 | KITBLC3FG0 | KITBLC3FG0 | KITBLC3FG0 |
| | 575 VAC 3~, conductivity 75 to 350 µS/cm | | KITBLCT2C2 | KITBLCT2C2 | KITBLCT3C2 | KITBLCT3C2 | KITBLCT3C2 |
| | 575 VAC 3~, conductivity 350 to 750 µS/cm | | KITBLCT2D2 | KITBLCT2D2 | KITBLCT3D2 | KITBLCT3D2 | KITBLCT3D2 |
| 575 VAC 3~, conductivity 750 to 1250 µS/cm | | KITBLCT2D2 | KITBLCT2D2 | KITBLCT3D2 | KITBLCT3D2 | KITBLCT3D2 | |

Tab. 11.c

9.2 Spare parts for models UE025 to UE065

Key:

- 1 drain circuit
- 2 fill solenoid valve kit
- 3 internal tubing kit
- 4 conductivity meter
- 5 drain pump kit
- 6 manifold
- 7 drain pump hose
- 8 cylinder
- 9 TAM (transformer for measuring the current)
- 10 contactor
- 11 transformer
- 13 fuse carrier
- 14 electronic controller
- 15 power terminals
- 16 cable clamp
- 17 switch
- 18 terminal with liquid crystal display (fitted on the cover of the electrical compartment)
- 19 kit outlet connector steam (only in the UE045(208-230Vac and UE065)
- 20 drain tempering valve
- 21 liquid level cutoff (only in the UE045(208-230Vac and UE065)

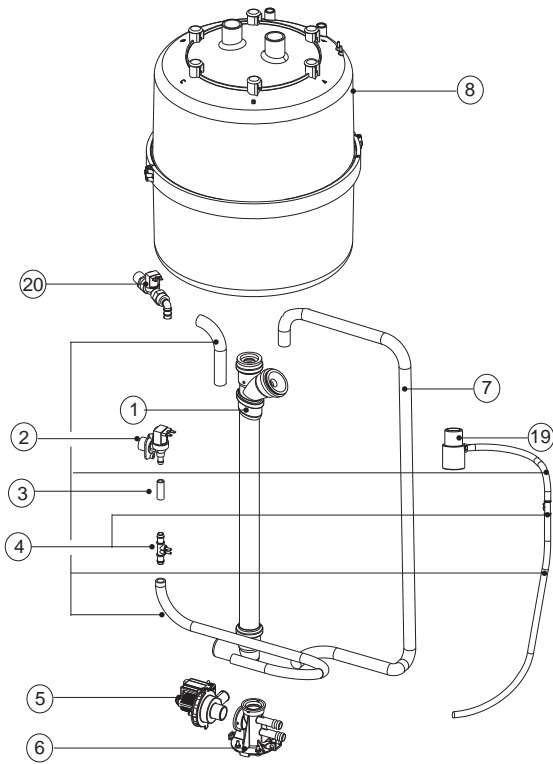


Fig. 9.c

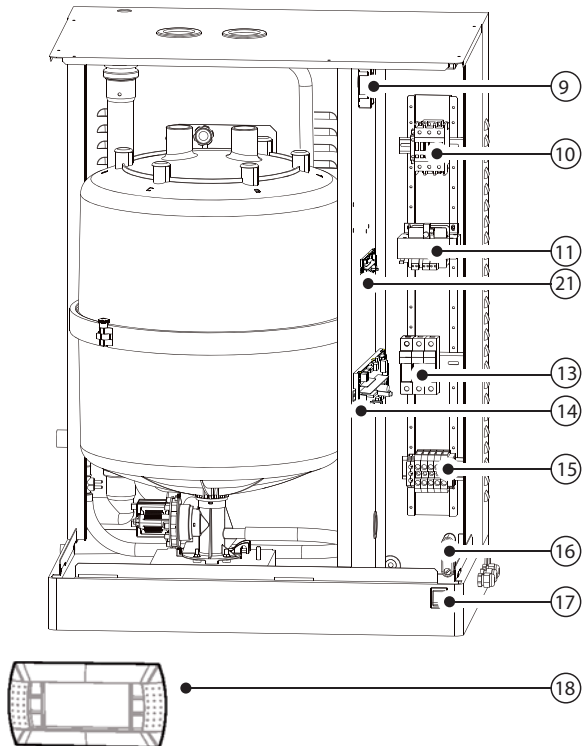


Fig. 9.d

Table of water circuit, electrical and electronic spare parts, UE025 to UE065

| Description | spare part code | | | | | | | Position | Figure |
|---|---------------------------|------------|------------|------------|------------|------------|------------|----------|---------------------|
| | UE025 | | UE035 | | UE045 | | UE065 | | |
| | 230 V | 400 V | 230 V | 400 V | 400V | 230 V | | | |
| Water circuit | | | | | | | | | |
| Drain pump hose | UEKDH00000 | | | | | | | 7 | 9.c |
| Manifold | UEKCOLL000 | | | | | | | 6 | 9.c |
| Drain pump kit | KITPSE0000 | | | | | | | 5 | 9.c |
| Internal tubing kit | UEKT10000L | | | | UEKT1000XL | | | 3 | 9.c |
| Double check valve kit | FWHDCV0000 | | | | | | | - | |
| Conductivity meter kit | KITCN00000 | | | | | | | 4 | 9.c |
| Fill solenoid valve kit | KITVC10058 | | | | KITVC10070 | | | 2 | 9.c |
| Drain circuit | UEKDC00000 | | | | UEKDC10000 | | | 1 | 9.c |
| Electrical and electronics | | | | | | | | | |
| Display terminal | HCTLEYF0w0 ⁽³⁾ | | | | | | | 18 | 9.d |
| TAM (current transformer) | UEKTAM0000 | | | | | | | 9 | 9.b |
| Contactors | URKCONT300 | UEKCONT200 | URKCONT300 | URKCONT400 | URKCONT300 | | | 10 | 9.d |
| Power transformer: 230/400-24V | UEKTR30000 | | | | | | | 11 | 9.d |
| Electronic controller | UEYxxv0z0i ⁽²⁾ | | | | | | | 14 | 9.d |
| Fuse carrier | URKFH20000 | | | | | | | 13 | 9.d |
| Pump control relay | UEKRD00000 | | | | | | | - | |
| F1 - F2 230 to 400Vac power fuses | UEKFUSE100 | | | | | | | - | see wiring diagrams |
| F3 Pump fuse | UEKFUSE300 | UEKFUSE100 | UEKFUSE300 | UEKFUSE100 | UEKFUSE300 | UEKFUSE100 | UEKFUSE100 | - | see wiring diagrams |
| F4 Transformer secondary fuse | UEKFUSE400 | | | | | | | - | see wiring diagrams |
| Connection cable between terminal and electronic controller | S90CONN002 | | | | | | | - | |

Tab. 9.d

(1) when ordering, as well as the controller code specify the complete code and serial number of the humidifier.

(2) xx: kg/h (01,.....65)

v: power supply (K=230V 3ph, M=460V 3ph, etc)

z: match digit board (8th code number of the card)

i: 0 single package / 1 multiple package

(3) w: match digit terminal (9th code number of the terminal)

Table of spare parts for standard and special cylinders UE025 to UE065

| Description | UE025 | UE035 | UE045 | UE065 | |
|-------------------------------|---|------------|------------|------------|------------|
| STANDARD disposable cylinders | 208V 3ph cylinder, conductivity 350 to 1250 µS/cm | BLOT4C00H2 | BLOT4B00H2 | BLOT5A00H1 | |
| | 230V 3ph cylinder, conductivity 350 to 1250 µS/cm | BLOT4C00H2 | BLOT4B00H2 | BLOT5B00H0 | |
| | 460V 3ph cylinder, conductivity 350 to 1250 µS/cm | BLOT4D00H2 | BLOT4D00H2 | BLOT4D00H2 | |
| | 575V 3ph cylinder, conductivity 350 to 1250 µS/cm | BLOT4D00H2 | BLOT4D00H2 | BLOT4D00H2 | |
| SPECIAL disposable cylinders | 208V 3ph cylinder, conductivity 75 to 350 µS/cm | BLOT4B00H2 | BLOT4B00H2 | BLOT5A00H1 | |
| | 230V 3ph cylinder, conductivity 75 to 350 µS/cm | BLOT4B00H2 | BLOT4B00H2 | BLOT5A00H1 | |
| | 460V 3ph cylinder, conductivity 75 to 350 µS/cm | BLOT4D00H2 | BLOT4C00H2 | BLOT4C00H2 | |
| | 575V 3ph cylinder, conductivity 75 to 350 µS/cm | BLOT4D00H2 | BLOT4D00H2 | BLOT4D00H2 | |
| | 208V 3ph cylinder, conductivity 75 to 350 µS/cm | BLCT4B00W2 | BLCT4B00W2 | BLCT5A00W1 | |
| | 230V 3ph cylinder, conductivity 75 to 350 µS/cm | BLCT4B00W2 | BLCT4B00W2 | BLCT5A00W1 | |
| | 208V 3ph cylinder, conductivity 350 to 1250 µS/cm | BLCT4C00W2 | BLCT4B00W2 | BLCT5A00W1 | |
| | 230V 3ph cylinder, conductivity 350 to 1250 µS/cm | BLCT4C00W2 | BLCT4B00W2 | BLCT5B00W0 | |
| SPECIAL openable cylinders | 460V 3ph cylinder, conductivity 75 to 350 µS/cm | BLCT4D00W2 | BLCT4C00W2 | BLCT4C00W2 | |
| | 460V 3ph cylinder, conductivity 350 to 1250 µS/cm | BLCT4D00W2 | BLCT4D00W2 | BLCT4D00W2 | |
| | 575V 3ph cylinder, conductivity 75 to 350 µS/cm | BLCT4D00W2 | BLCT4D00W2 | BLCT4D00W2 | |
| | 575V 3ph cylinder, conductivity 350 to 1250 µS/cm | BLCT4D00W2 | BLCT4D00W2 | BLCT4D00W2 | |
| | 208V 3ph cylinder, conductivity 75 to 350 µS/cm | KITBLCT4B2 | KITBLCT4B2 | KITBLCT5A0 | |
| | 208V 3ph cylinder, conductivity 350 to 1250 µS/cm | KITBLCT4C2 | KITBLCT4B2 | KITBLCT5A0 | |
| | 230V 3ph cylinder, conductivity 75 to 350 µS/cm | KITBLCT4B2 | KITBLCT4B2 | KITBLCT5A0 | |
| | 230V 3ph cylinder, conductivity 350 to 1250 µS/cm | KITBLCT4C2 | KITBLCT4B2 | KITBLCT5B0 | |
| Electrode and gasket kit | 460V 3ph cylinder, conductivity 75 to 350 µS/cm | KITBLCT4D2 | KITBLCT4C2 | KITBLCT4C2 | |
| | 460V 3ph cylinder, conductivity 350 to 1250 µS/cm | KITBLCT4D2 | KITBLCT4D2 | KITBLCT4D2 | |
| | 575V 3ph cylinder, conductivity 75 to 350 µS/cm | KITBLCT4D2 | KITBLCT4D2 | KITBLCT4D2 | |
| | 575V 3ph cylinder, conductivity 350 to 1250 µS/cm | KITBLCT4D2 | KITBLCT4D2 | KITBLCT4D2 | |
| | Gasket and filter kit | KITBLC4FG0 | KITBLC4FG0 | KITBLC4FG0 | KITBLC5FG0 |

Tab. 9.e

9.3 Cleaning and maintenance of the cylinder

Replacement

Important: The cylinder must only be replaced by qualified personnel, and with the humidifier unplugged from the power supply.

In normal conditions, the **disposable cylinders should be replaced after one year** (or 2500 hours of operation, if cleaned periodically), while the **openable cylinders last 5 years** (or 10,000 hours of operation, if cleaned periodically). They must be replaced immediately – even before the specified intervals – if any anomalies occur. For example, when the lime scale inside the cylinder prevents the correct flow of electric current.

Replacement procedure::

1. empty all the water (see chap. 6);
2. turn off the humidifier (switch "0"), and open the mains disconnect switch on the power supply (safety procedure);
3. wait for the humidifier and the cylinder to cool down;
4. remove the front cover;
5. disconnect the electrical cables from the cylinder;
6. release the cylinder from the locking device and lift it to remove it;
7. insert the new cylinder (make sure that the model and the power supply of the new cylinder correspond to the rated data);
8. fasten the cylinder;
9. reconnect the electrical cables to the cylinder;
10. replace the front cover;
11. switch on the humidifier;
12. reset cylinder operating hour counter (see parameters da , chap. 7);
13. Activate the wash new cylinder procedure, pressing ENTER + DOWN for 5 seconds

9.4 Mechanically draining the water in the cylinder

Drain due to gravity without activating the humidifier, recommended if:

- humidifier decommissioned;
- to empty the cylinder without switching the humidifier on.

Mechanical drain:

- make sure that the humidifier is not powered;
- remove the cover;
- activate the mechanical device under the cylinder (see part A, Fig. 9.e).

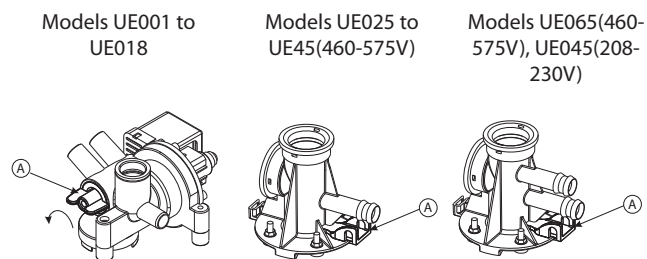


Fig. 9.e

Periodical checks

- **After one hour** of operation: check for any significant water leaks.
- **Every 15 days** or no more than 300 operating hours: check operation, the absence of significant water leaks, the general conditions of the casing. Check that during operation there are no arcs or sparks between the electrodes.
- **Every 3 months** or no more than 1000 operating hours:
 - disposable cylinders: check operation, the absence of significant water leaks and if necessary replace the cylinder;
 - openable cylinders: if there are significantly blackened areas, check the deposits on the electrodes and clean them, using the specific electrode and gasket kit.
- **Every year** or no more than 2500 operating hours:
 - disposable cylinders: replace;
 - openable cylinders: if there are significantly blackened areas, check the deposits on the electrodes and clean them, using the specific electrode and gasket kit.
- **After 5 years** or no more than 10,000 operating hours: replace the openable cylinder.

After extended operation, or when using water rich in salts, the solid deposits that naturally form on the electrodes may grow until attaching to the inside wall of the cylinder. If these deposits are conductive the heat generated may overheat the plastic until it melts, with the risk of very hot water being released.

Important: In the event of water leaks, disconnect the power supply from the humidifier as the water may conduct electricity.

9.5 Cylinder connection, three-phase models UE025 to UE065

| production (kg/h) | conductivity (µS/cm) | power supply (V) | |
|-------------------|----------------------|------------------|---------|
| | | 208-230 | 460-575 |
| 25 | 75/350 µS/cm | A | B |
| | 350/1250 µS/cm | B | B |
| 35 | 75/350 µS/cm | A | B |
| | 350/1250 µS/cm | A | B |
| 45 | 75/350 µS/cm | A | B |
| | 350/1250 µS/cm | A | B |
| 65 | 75/350 µS/cm | / | B |
| | 350/1250 µS/cm | / | B |

Tab. 9.f

The cable ends must be tightened with the top nut to 3 Newton · m (27 lbf-in). (units with BL*T5* cylinder only)

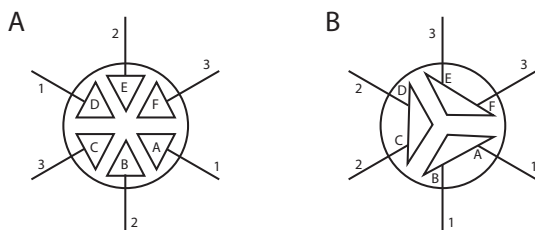


Fig. 9.f

Three-phase and single-phase models UE01 to UE018

UE001-3-9 single-phase



75...1250 µS
1 = A
2 = D

UE005 200...230 V single-phase



175...350 µS 350...1250 µS
1 = A - E - C 1 = A - B - C
2 = B - F - D 2 = D - E - F

UE005-8 / UE010-15 200...230 V three-phase



75...350 µS 350...1250 µS
1 = A - D 1 = A - B
2 = B - E 2 = C - D
3 = C - F 3 = E - F

UE003 200 - 230 - 400 - 460 V three-phase



75...1250 µS
1 = A
2 = C
3 = E

UE005-8 400 - 460 - 575 V three-phase



75...1250 µS
1 = A
2 = C
3 = E

UE0010-18 400 - 460 - 575 V three-phase



75...1250 µS
1 = A
2 = C
3 = E

9.6 Cleaning and maintenance of the other components

- when cleaning plastic components do not use detergents or solvents;
- scale can be removed using a solution of 20% acetic acid and then rinsing with water.

Maintenance checks on other components:

- ☒ fill solenoid valve. After having disconnected the cables and the tubing, remove the solenoid valve and make sure the inlet filter is clean; if necessary, clean with water and a soft brush;
- ☒ manifold with drain pump. Check that there are no solid residues in the cylinder attachment, remove any impurities. Check that the gasket (o-ring) is not damaged or cracked, replace if necessary. Check that there are no solid residues in the drain hose;
- ☒ drain pump. Disconnect the power supply, remove the pump and clean any impurities. Clean the tank from any deposits and check that the water flows freely from the tank to the drain (corresponding to the drain pump);
- ☒ fill tank. Check that there are no obstructions or solid particles and that the conductivity measuring electrodes are clean, remove any impurities and rinse;
- ☒ internal tubing kit. Check that the pipes and hoses are free and clear of impurities, remove any impurities and rinse.

Important: after having replaced or checked the water circuit, make sure that the connections are tight. Restart the unit and run a number of fill and drain cycles (from 2 to 4), after which, applying the safety procedure, check for any water leaks.

Fuses in the auxiliary circuits

| Fuses | UE001 to 018 | UE 025 to 065 (460-575V) | UE025-045 (208-230V) |
|--------|------------------------------|--------------------------|------------------------|
| F1. F2 | 1 A fast-blow, 10.3x38 | | 2 A fast-blow, 10.3x38 |
| F3 | 1 A fast-blow, 5x20 ceramic | | 1 A fast-blow, 10.3x38 |
| F4 | 4 A T slow-blow 5x20 ceramic | | |

Tab. 9.g

10. WIRING DIAGRAMS

10.1 Diagram of single-phase models UE001 to UE009 (208-230V)


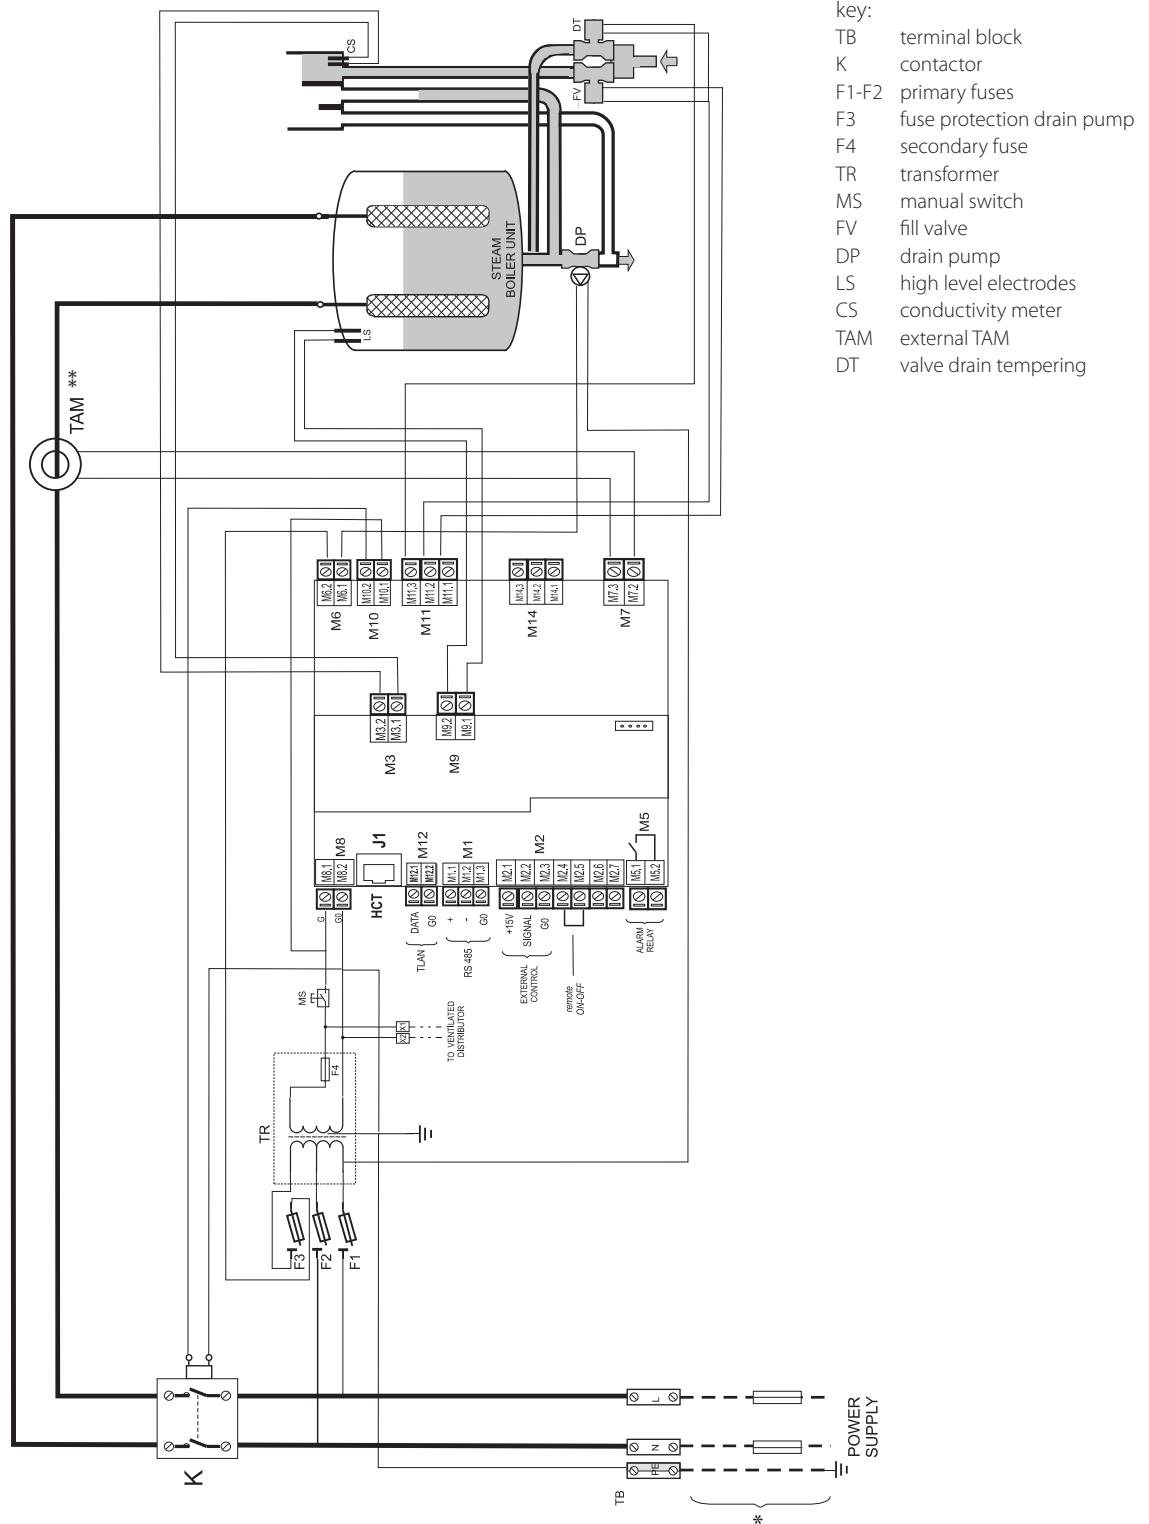


Fig. 10.a

(**) Important: for the TAM configuration and connection see par. 11.1

10.2 Diagram of three-phase models UE003 to UE018 (208-230-460-575V)

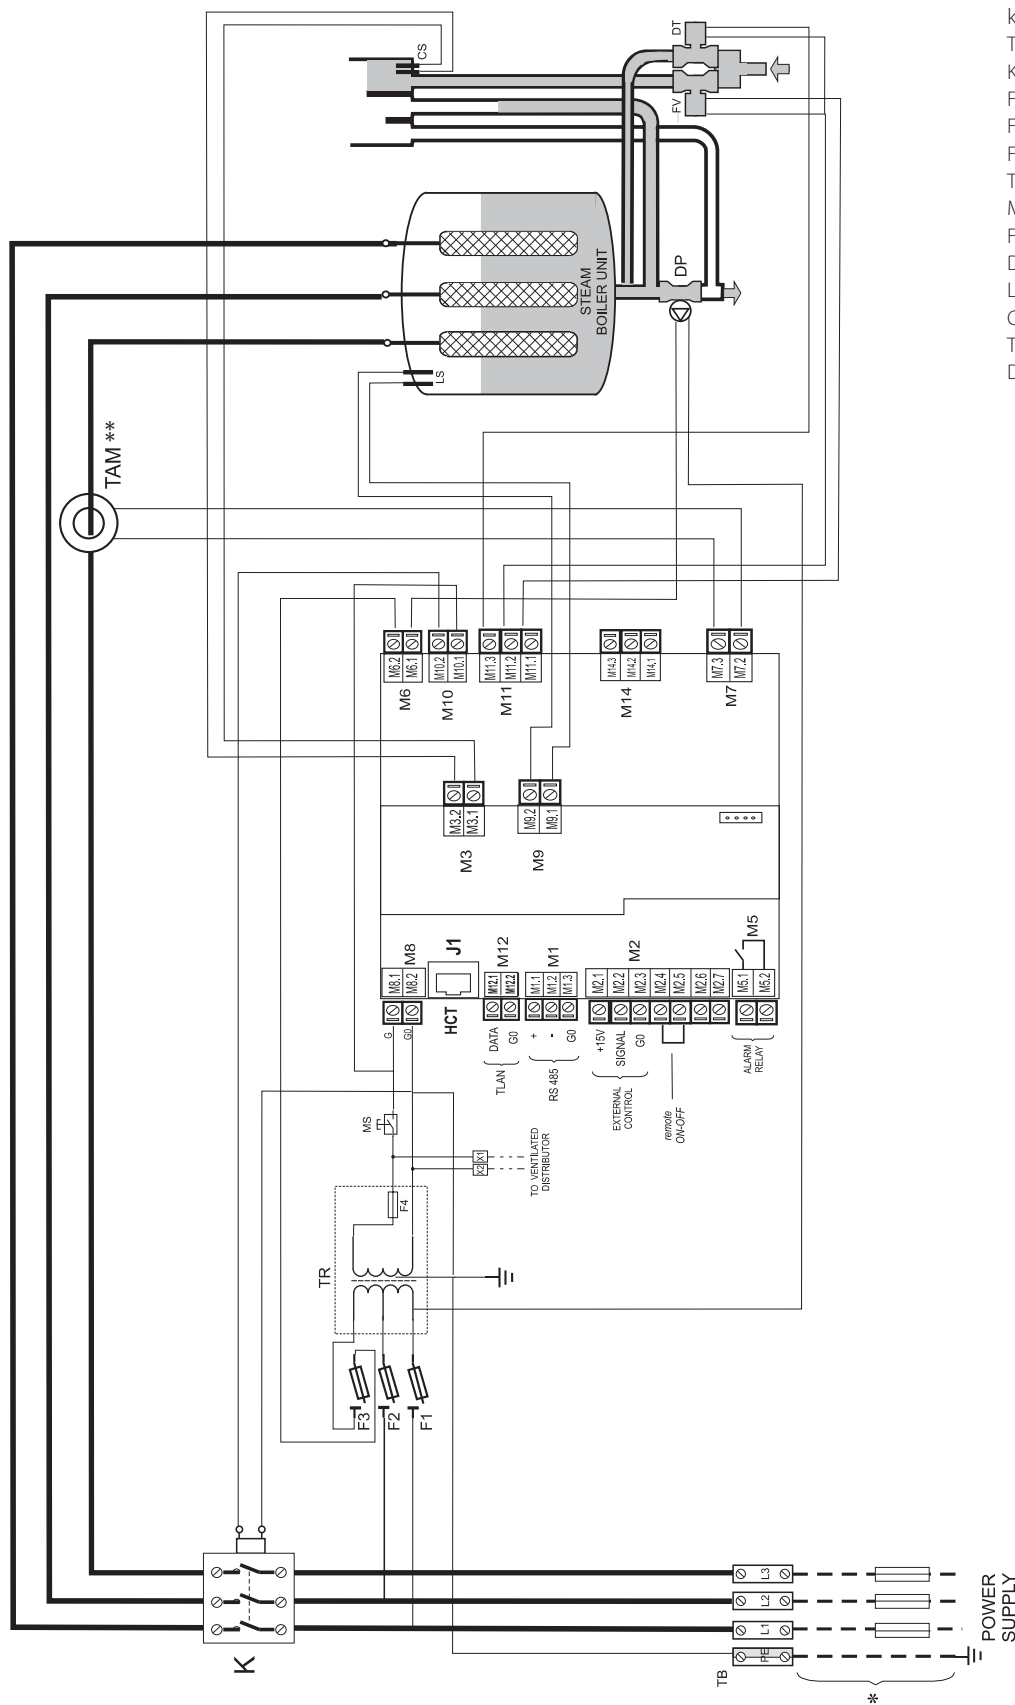

- key:
- TB terminal block
 - K contactor
 - F1-F2 primary fuses
 - F3 fuse protection drain pump
 - F4 secondary fuse
 - TR transformer
 - MS manual switch
 - FV fill valve
 - DP drain pump
 - LS high level electrodes
 - CS conductivity meter
 - TAM external TAM
 - DT valve drain tempering

Fig. 10.b

(**) Important: for the TAM configuration and connection see par. 11.1

10.3 Diagram of three-phase models UE025 (208-230-460-575V) and UE045 (460-575 V)

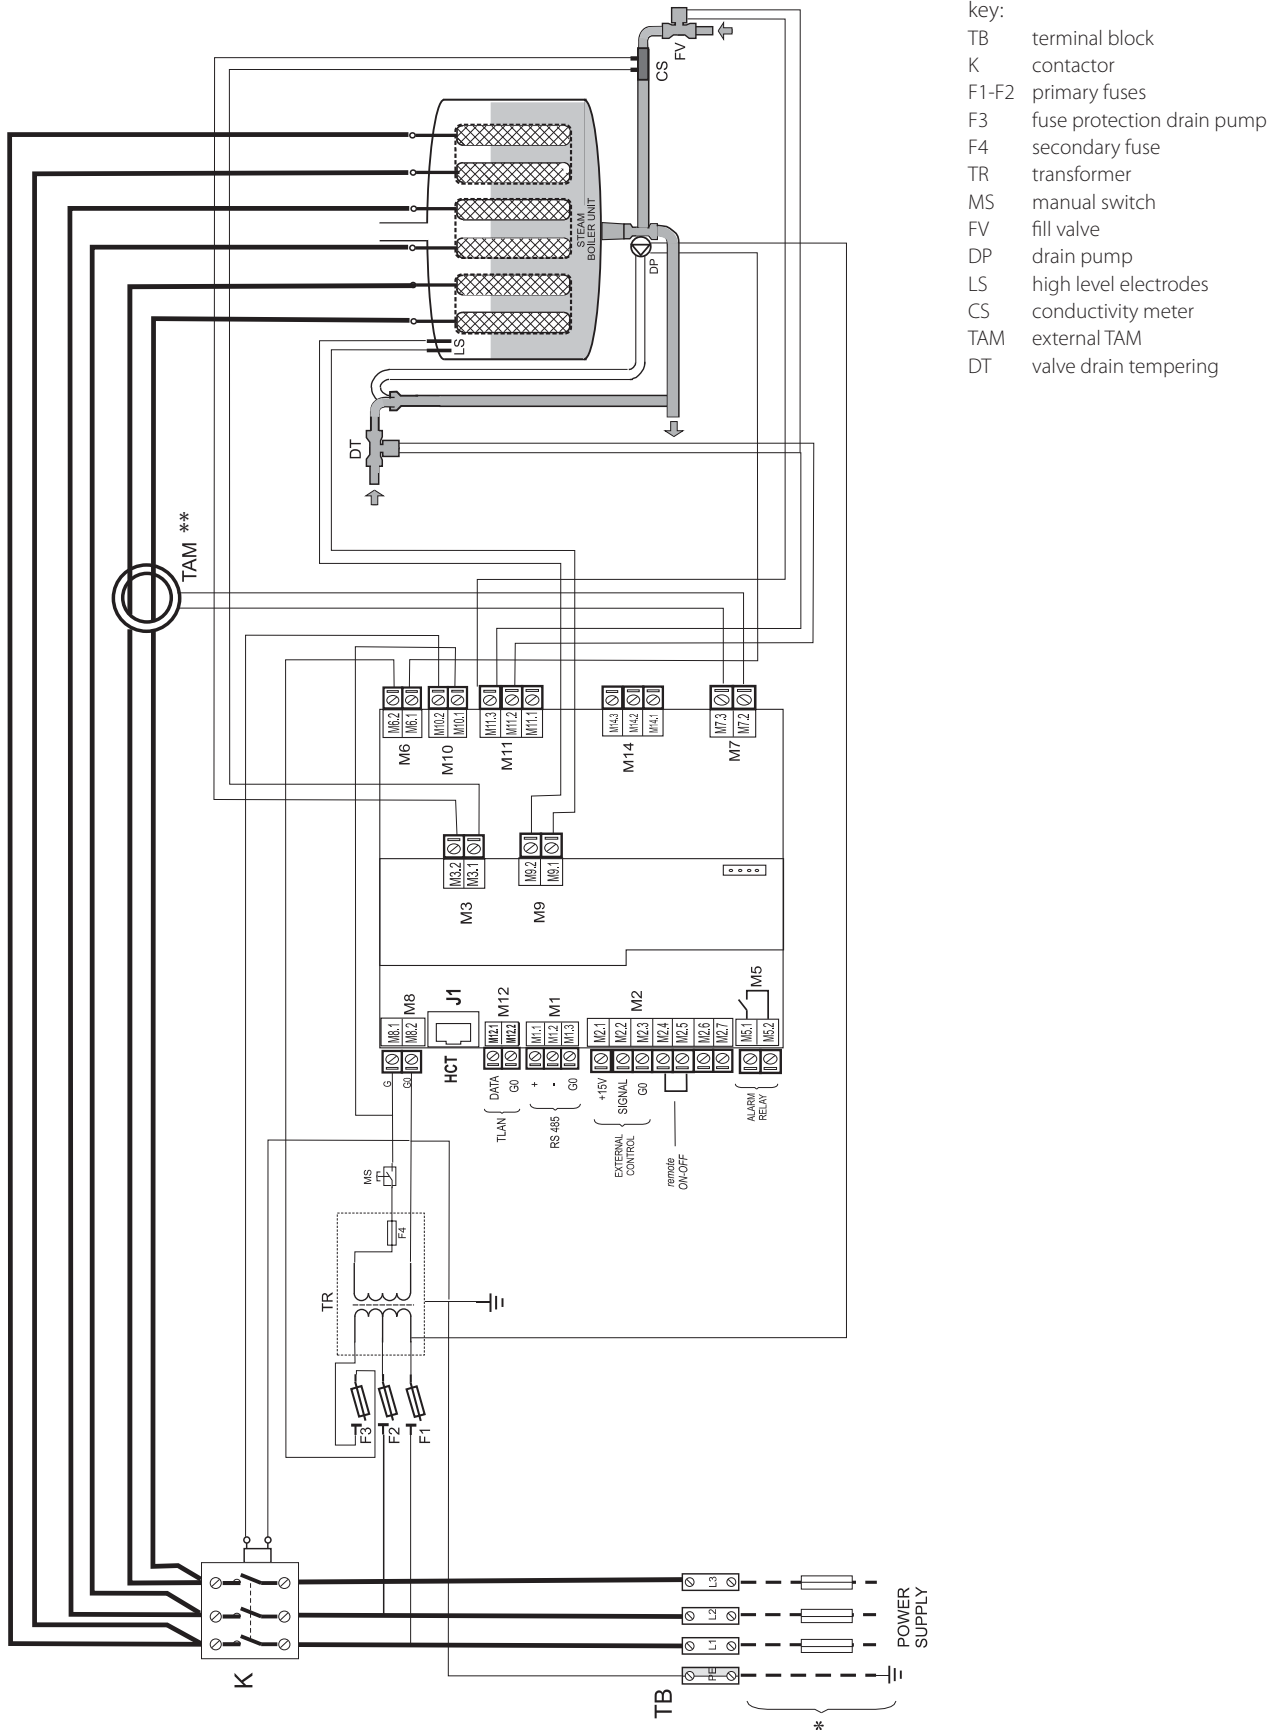


Fig. 10.c

(**) Important: for the TAM configuration and connection see par. 11.1

10.4 Diagram of three-phase models UE045 (208-230 V) and UE065(460-575V)

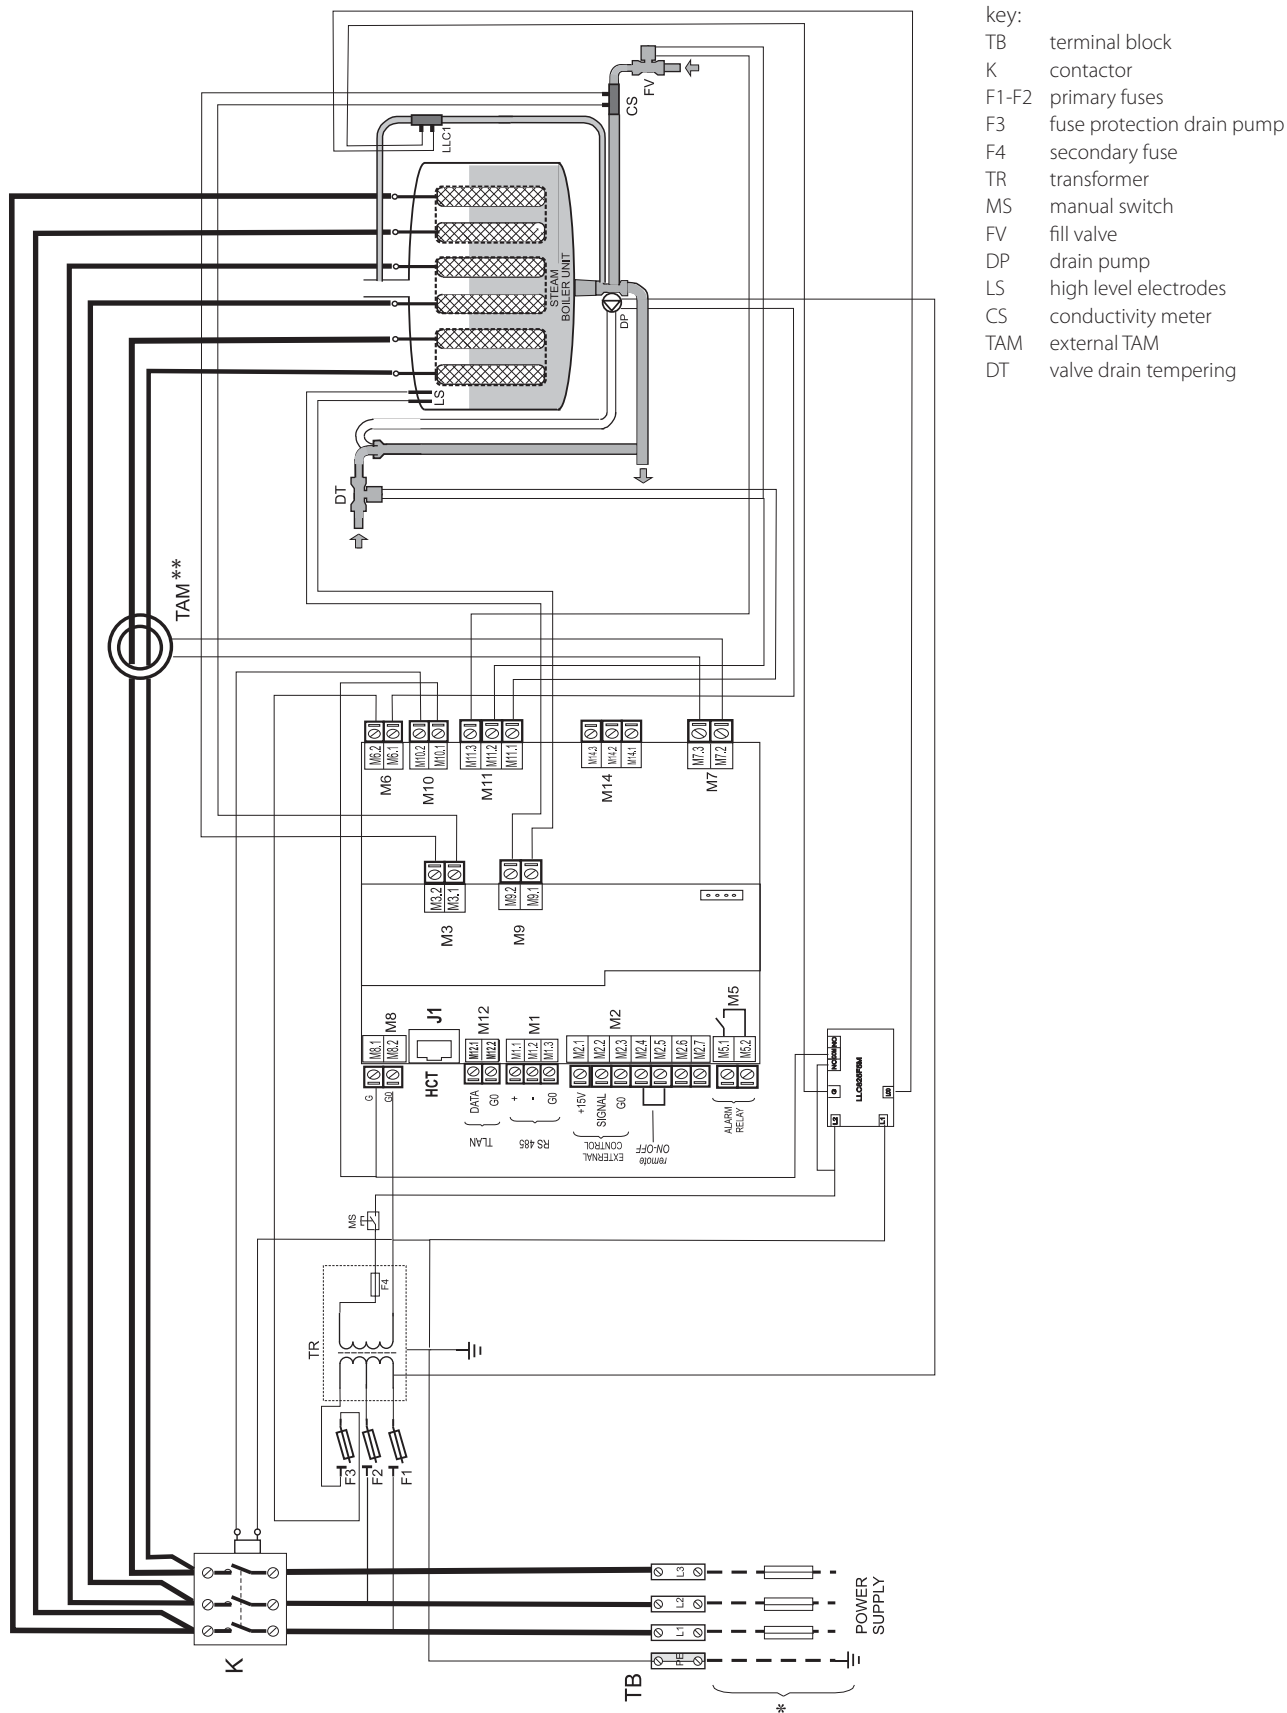


Fig. 10.d

(**) Important: for the TAM configuration and connection see par. 11.1

11. GENERAL FEATURES AND MODELS

The following table lists the electrical data relating to the power supply of the various models and the specifications of each. Note that some models may be powered at different voltages, obviously with different power input and steam production.

| model | steam production ^(2,4) (kg/h) (lbs/hr) | power ⁽²⁾ (kW) | power supply | | current ⁽²⁾ (A) | nominal specifications | | cable ⁽³⁾ (mm ²) / (AWG) | recommended External fuses sizes ⁽³⁾ (A / type) | wiring diagram (Fig.) |
|-------|---|---------------------------|--------------|---------------------------------------|-------------------------------|----------------------------------|-----|---|---|-----------------------------|
| | | | code | voltages ⁽¹⁾ (V - type) | | TAM configuration ⁽⁵⁾ | | | | |
| UE001 | 1,5 / 3.3 | 1,1 | U | 208 - 1~ | 5,4 | 13.a | 100 | 1,5 / 16 | 10 A / fast blow | 10.a |
| | | | D | 230 - 1~ | 4,9 | 13.a | 100 | 1,5 / 16 | 10 A / fast blow | 10.a |
| UE003 | 3,0 / 6.6 | 2,2 | U | 208 - 1~ | 10,8 | 13.d | 300 | 2,5/14 | 16 A / fast blow | 10.a |
| | | | D | 230 - 1~ | 9,8 | 13.d | 300 | 2,5/14 | 16 A / fast blow | 10.a |
| | | | W | 208 - 3~ | 6,2 | 13.a | 100 | 1,5 / 16 | 10 A / fast blow | 10.b |
| | | | K | 230 - 3~ | 5,6 | 13.a | 100 | 2,5/14 | 16 A / fast blow | 10.b |
| | | | M | 460 - 3~ | 2,8 | 13.d | 100 | 1,5 / 16 | 10 A / fast blow | 10.b |
| UE005 | 5,0 / 11.0 | 3,7 | U | 208 - 1~ | 18,0 | 13.e | 300 | 6/10 | 32 A / fast blow | 10.a |
| | | | D | 230 - 1~ | 16,3 | 13.e | 300 | 6/10 | 32 A / fast blow | 10.a |
| | | | W | 208 - 3~ | 10,4 | 13.c | 300 | 2,5/14 | 16 A / fast blow | 10.b |
| | | | K | 230 - 3~ | 9,4 | 13.c | 300 | 2,5/14 | 16 A / fast blow | 10.b |
| | | | M | 460 - 3~ | 4,7 | 13.a | 100 | 1,5 / 16 | 10 A / fast blow | 10.b |
| | | | N | 575 - 3~ | 3,8 | 13.a | 100 | 1,5 / 16 | 10 A / fast blow | 10.b |
| UE008 | 8,0 / 17.6 | 6,0 | W | 208 - 3~ | 16,7 | 13.c | 300 | 6/10 | 32 A / fast blow | 10.b |
| | | | K | 230 - 3~ | 15,1 | 13.c | 300 | 6/10 | 32 A / fast blow | 10.b |
| | | | M | 460 - 3~ | 7,5 | 13.a | 100 | 2,5/14 | 16 A / fast blow | 10.b |
| | | | N | 575 - 3~ | 6,0 | 13.a | 100 | 2,5/14 | 16 A / fast blow | 10.b |
| UE009 | 9,0 / 19.8 | 6,7 | U | 208 - 1~ | 31,37 | 13.a | 500 | 16/6 | 50A / fast blow | 10.a |
| | | | D | 230 - 1~ | 29,3 | 13.a | 500 | 10/8 | 40 A / fast blow | 10.a |
| UE010 | 10,0 / 22.0 | 7,5 | W | 208 - 3~ | 18,8 | 13.c | 300 | 6/10 | 32 A / fast blow | 10.a |
| | | | K | 230 - 3~ | 10,8 | 13.c | 300 | 2,5/14 | 16 A / fast blow | 10.b |
| | | | M | 460 - 3~ | 9,4 | 13.a | 100 | 2,5/14 | 16 A / fast blow | 10.b |
| | | | N | 575 - 3~ | 7,5 | 13.d | 300 | 2,5/14 | 16 A / fast blow | 10.b |
| UE015 | 15,0 / 33.0 | 11,2 | W | 208 - 3~ | 31,2 | 13.c | 500 | 10/8 | 40 A / fast blow | 10.b |
| | | | K | 230 - 3~ | 28,2 | 13.c | 500 | 16 / 0 | 32 A / fast blow | 10.b |
| | | | M | 460 - 3~ | 14,1 | 13.a | 300 | 10/8 | 20 A / fast blow | 10.b |
| | | | N | 575 - 3~ | 11,3 | 13.a | 300 | 4 / 10 | 16 A / fast blow | 10.b |
| UE018 | 18 / 39.7 | 13,5 | M | 460 - 3~ | 16,9 | 13.a | 500 | 6 / 10 | 32 A / fast blow | 10.b |
| | | | N | 575 - 3~ | 13,57 | 13.a | 500 | 6 / 10 | 32 A / fast blow | 10.b |
| UE025 | 25 / 55.1 | 18,7 | W | 208 - 3~ | 52,0 | 13.b | 500 | 25 / 3 | 80 A / fast blow | 10.c |
| | | | K | 230 - 3~ | 47,1 | 13.b | 500 | 25 / 3 | 63 A / fast blow | 10.c |
| | | | M | 460 - 3~ | 23,5 | 13.c | 500 | 10/8 | 32A / fast blow | 10.c |
| | | | N | 575 - 3~ | 18,8 | 13.c | 500 | 6/10 | 25A / fast blow | 10.c |
| UE035 | 35 / 77.2 | 26,2 | W | 208 - 3~ | 72,9 | 13.c | 700 | 35 / 4 | 100 A / fast blow | 10.c |
| | | | K | 230 - 3~ | 65,9 | 13.c | 700 | 35 / 4 | 100 A / fast blow | 10.c |
| | | | M | 460 - 3~ | 32,9 | 13.c | 500 | 16 / 6 | 50 A / fast blow | 10.c |
| | | | N | 575 - 3~ | 26,4 | 13.c | 500 | 10/8 | 40 A / fast blow | 10.c |
| UE045 | 45 / 99.2 | 33,7 | W | 208 - 3~ | 93,68 | 13.b | 700 | 70 / 2 | 125 A / fast blow | 10.d |
| | | | K | 230 - 3~ | 84,72 | 13.b | 700 | 70 / 2 | 125 A / fast blow | 10.d |
| | | | M | 460 - 3~ | 42,4 | 13.c | 700 | 16 / 6 | 60 A / fast blow | 10.c |
| | | | N | 575 - 3~ | 33,9 | 13.c | 700 | 16 / 6 | 50 A / fast blow | 10.c |
| UE065 | 65 / 143.3 | 48,7 | M | 460 - 3~ | 61,19 | 13.b | 700 | 35 / 4 | 100 A / fast blow | 10.d |
| | | | N | 575 - 3~ | 48,95 | 13.b | 700 | 35 / 4 | 80 A / fast blow | 10.d |

Tab. 11.a

- (1) tolerance allowed on the rated mains voltage: -15%, +10%;
- (2) tolerance on the rated values: +5%, -10% (EN 60335-1);
- (3) recommended values refer to laying PVC or rubber cables in closed conduits, 20 m (65.6 feet) long; use the local standards, or whichever is more restrictive,
- (4) rated max instant steam production: the average steam production may be affected by external factors, such as: ambient temperature, water quality, steam distribution system;
- (5) refer to the wiring diagrams to verify
- the data are not absolute and if these differ from local standards, the latter must prevail.

TAM configurations and connections (transformer for measuring the current)

! **Important:** the configurations and connections are already made by CAREL, and no changes are required. The following diagrams represent possible connection modes and may be useful in the event of serious electrical malfunctions on the humidifier. All operations must only be performed by qualified personnel, improper use may cause serious damage.

one cable turn

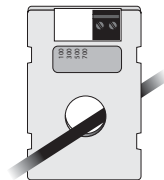


Fig. 11.a

one turn of the two cables of the same phase

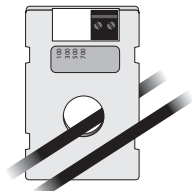


Fig. 11.b

two cable turns of the same phase

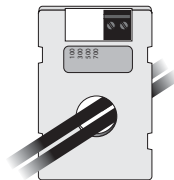


Fig.11.c

one cable in "double turn" mode

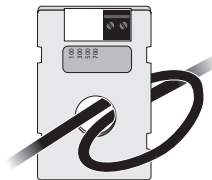


Fig.11.d

three cable turns of the same phase

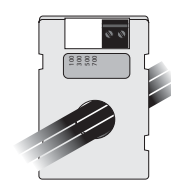


Fig.11.e

! **Important:** to avoid interference, separate the power cables from the probe cables.

11.2 Technical specifications

| technical specifications | | UEY models | | | | | | | | | | | | | |
|---|-----------|--|-----------|-----------|------------------------|------------|------------|------------------------|-----------|--------------|------------------------|--------------|-----------|--------------|------------|
| | | UE001* | UE003* | UE003** | UE005* | UE005** | UE008** | UE009* | UE010** | UE015** | UE018** | UE025** | UE035** | UE045** | UE065** |
| steam | | | | | | | | | | | | | | | |
| connection dia. mm (in) | 208-230 V | 22/30 (0.9/1.2) | | | | 30 (1.2) | | | | 1x40 (1x1.6) | | 2x40 (2x1.6) | | -- | |
| | 460 -575V | 22/30 (0.9/1.2) | | | | 30 (1.2) | | | | 1x40 (1x1.6) | | | | 4x40 (2x1.6) | |
| outlet pressure limits Pa (PSI) (" W.C.) | | 0/1500 (0/0.218) (6.0) | | | 0/1300 (0/0.188) (5.2) | | | 0/1350 (0/0.196) (5.4) | | | 0/2000 (0/0.290) (8.0) | | | | |
| supply water | | | | | | | | | | | | | | | |
| connection | | 3/4" G | | | | | | | | | | | | | |
| temperature limits °C (°F) | | 1 to 40 (33.8 to 104) | | | | | | | | | | | | | |
| pressure limits (MPa) (PSI) | | 0.1 to 0.8 (1 to 8 bar) (14.5 to 116.0) | | | | | | | | | | | | | |
| hardness limits (°fH) | | ≤ 40 | | | | | | | | | | | | | |
| instant flow-rate (l/min) (GPM) | | 0.6 (0.13) | | | | 1.1 (0.24) | | | | 5.85 (1.3) | | 7 (1.5) | | 7 (1.5) | |
| conductivity range (µS/cm) | | 75 to 1250 | | | | | | | | | | | | | |
| cdrain water | | | | | | | | | | | | | | | |
| connection dia. mm (in) | | 40 (1.6) | | | | | | 50 (1.9) | | | | | | | |
| typical temperature °C (°F) | | ≤100 (212) | | | | | | | | | | | | | |
| Drain tempering temperature °C (°F) | | ≤ 60/ (140) | | | | | | | | | | | | | |
| instant flow-rate (l/min) (GPM) | | 7 (1.5) | | | | | | 22.5 (4.9) | | | | | | | |
| instant flow-rate of the drain tempering valve | | 12 (3.2) | | | | | | 30 (7.9) | | | | | | | |
| environmental conditions | | | | | | | | | | | | | | | |
| ambient operating temp. °C (°F) | | 1 to .40 (33.8 to .104) | | | | | | | | | | | | | |
| ambient operating humidity (% rH) | | 10 to 60 | | | | | | | | | | | | | |
| storage temperature °C (°F) | | -10 to 70 (14 to .158) | | | | | | | | | | | | | |
| storage humidity (% rH) | | 5 to 95 | | | | | | | | | | | | | |
| index of protection | | IP20 | | | | | | | | | | | | | |
| electronic controller | | | | | | | | | | | | | | | |
| Y basic | | UEY | | | | | | | | | | | | | |
| auxiliary voltage/frequency (V - Hz) | | 24 / 50/60 | | | | | | | | | | | | | |
| maximum auxiliary power (VA) | | 90 | | | | | | | | | | | | | |
| probe inputs (general features) | | can be selected for the following signals: 0 to 10 Vdc, 2 to 10 Vdc, 0 to 20 mA, 4 to 20 mA input impedance: 20 kΩ with: 0 to 10 Vdc, 2 to 10 Vdc signals 100 Ω with: 0 to 20 mA, 4 to 20 mA signals | | | | | | | | | | | | | |
| active probe power supply (general features) | | 15 Vdc. 100 mA. protected against short-circuits +1 Vdc with 135 Ω load | | | | | | | | | | | | | |
| alarm relay outputs(general features) | | 250 V 5 A (2 A) - type of action-microswitching 1C | | | | | | | | | | | | | |
| remote enable input (general features) | | cvoltage-free contact; max. resistance 100 Ω; Vmax= 5 Vdc; Imax= 5 mA | | | | | | | | | | | | | |
| output | | | | | | | | | | | | | | | |
| instant steam production ⁽¹⁾ kg/h (lb/h) | | 1.5 (3.3) | 3.0 (6.6) | 3.0 (6.6) | 5.0 (11) | 5.0 (11) | 8.0 (17.6) | 9.0 (19.8) | 10.0 (22) | 15.0 (33) | 18.0 (39.7) | 25 (55.1) | 35 (77.2) | 45 (99.2) | 65 (143.3) |
| power input at rated voltage (kW) | | 1.12 | 2.25 | 2.5 | 3.75 | 3.75 | 6.0 | 6.75 | 7.5 | 11.25 | 13.5 | 18.75 | 26.25 | 33.75 | 48.75 |

Tab. 11.b

* single-phase, ** three-phase.

⁽¹⁾= the average steam production is affected by factors such as: ambient temperature, water quality, steam distribution system

11.3 Models of steam hoses

| | | UEY models | | | | | | | | | | | |
|---------------------------|--|-----------------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|---------------|
| code | | UE001Y | UE003Y | UE005Y | UE008Y | UE009Y | UE010Y | UE015Y | UE018Y | UE025Y | UE035Y | UE045Y | UE065Y |
| steam outlet dia. mm (in) | | 22 (0.9") | 22 (0.9") | 30 (1.2") | 30 (1.2") | 30 (1.2") | 30 (1.2") | 30 (1.2") | 30 (1.2") | 40 (1.6") | 40 (1.6") | 40 (1.6") | 2x40 (2x1.6") |
| max. capacity kg/h (lb/h) | | 1/1.5 (2.2/3.3) | 3 (6.6) | 5 (11) | 8 (17.6) | 9 (19.8) | 10 (22) | 15 (33) | 18 (39.7) | 25 (55.1) | 35 (77.2) | 45 (99.2) | 65 (143.3) |

| CAREL steam hoses | | | | | | | | | | | | | |
|-------------------|-----------|---|---|---|---|---|---|---|---|---|---|---|---|
| code | ID mm (") | | | | | | | | | | | | |
| SHOSE00022 | 22 (0.9") | √ | √ | - | - | - | - | - | - | - | - | - | - |
| SHOSE00030 | 30 (1.2") | - | - | √ | √ | √ | √ | √ | √ | - | - | - | - |
| SHOSE00040 | 40 (1.6") | - | - | - | - | - | - | - | - | √ | √ | √ | √ |

Tab. 11.c

11.4 Models of concentrated jet steam distributors

| | | UEY models | | | | | | | | | | | | |
|---------------------------|--|-----------------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|---------------|---------------|
| code | | UE001Y | UE003Y | UE005Y | UE008Y | UE009Y | UE010Y | UE015Y | UE018Y | UE025Y | UE035Y | UE045Y | UE045Y (230V) | UE065Y |
| Ø steam outlet mm (in) | | 22 (0.9") | 22 (0.9") | 30 (1.2") | 30 (1.2") | 30 (1.2") | 30 (1.2") | 30 (1.2") | 30 (1.2") | 40 (1.6") | 40 (1.6") | 40 (1.6") | 2x40 (2x1.6") | 2x40 (2x1.6") |
| max. capacity kg/h (lb/h) | | 1/1.5 (2.2/3.3) | 3 (6.6) | 5 (11) | 8 (17.6) | 9 (19.8) | 10 (22) | 15 (33) | 18 (39.7) | 25 (55.1) | 35 (77.2) | 45 (99.2) | 45 (99.2) | 65 (143.3) |

| CAREL distributors jet concentrated | | | | | | | | | | | | | | |
|-------------------------------------|-----------------------|--------------------------------------|---|---|---|---|---|---|---|------|------|--------|-------|-------|
| code | Ø steam inlet mm (in) | max. capacity Kg/h (lb/h) | | | | | | | | | | | | |
| SDPOEM0012 | 22 (0.9") | 3 (6.6) | 1 | 1 | - | - | - | - | - | - | - | - | - | - |
| SDPOEM0022 | 30 (1.2") | 18 (39.7) | 1 | 1 | 1 | 1 | 1 | 1 | 1 | - | - | - | - | - |
| SDPOEM0000 | 30 (1.6") | 18 (39.7) con foro da 30mm (1.6") | 1 | 1 | 1 | 1 | 1 | 1 | 1 | (2)* | (2)* | (4)*** | (4)** | (4)** |

Tab. 11.d

1 = the humidifier is connected to just one distributor

(2) = the humidifier is connected to two distributors (using the "Y" kit: UEKY000000)

2 = the humidifier is fitted with two outlets and can be connected to two distributors

(4) = the humidifier is fitted with two outlets and can be connected to up to four distributors (using two "Y" kits)

* = use CAREL "Y" kit code UEKY000000 (40 mm/1.6" inlet and 2 x 30 mm/1.2" outlets)

** = use CAREL "Y" kit code UEKY000000 (40 mm/1.6" inlet and 2 x 30 mm/1.2" outlets)

*** = use one CAREL "Y" kit code UEKY40X400 (40 mm/1.6" inlet and 2 x 40 mm/1.6" outlets) and two CAREL "Y" kit code UEKY000000 (40 mm/1.6" inlet and 2 x 30 mm/1.2" outlets)


11.5 Models of linear distributors and typical installations

| | | | | UEY models | | | | | | | | | | | | |
|-------------------------------------|------------------------------|---------------------------------|-------------------|--------------------|--------------|--------------|--------------|--------------|--------------|--------------|--------------|--------------|--------------|--------------|------------------|------------------|
| code | | | | UE001Y | UE003Y | UE005Y | UE008Y | UE009Y | UE010Y | UE015Y | UE018Y | UE025Y | UE035Y | UE045Y | UE045Y (230V) | UE065Y |
| Ø steam outlet mm (in) | | | | 22 (0.9") | 22 (0.9") | 30 (1.2") | 30 (1.2") | 30 (1.2") | 30 (1.2") | 30 (1.2") | 30 (1.2") | 40 (1.6") | 40 (1.6") | 40 (1.6") | 2x40 (2x1.6") | 2x40 (2x1.6") |
| max. capacity kg/h (lb/h) | | | | 1/1.5 (2.2/3.3) | 3 (6.6) | 5 (11) | 8 (17.6) | 9 (19.8) | 10 (22) | 15 (33) | 18 (39.7) | 25 (55.1) | 35 (77.2) | 45 (99.2) | 45 (99.2) | 65 (143.3) |
| CAREL DP linear distributors | | | | | | | | | | | | | | | | |
| cod. | Ø isteam inlet mm (in) | max. capacity Kg/h (lb/h) | length mm (in) | | | | | | | | | | | | | |
| DP035D22R0 | 22 (0.9") | 4 (8.8) | 332 (13.1) | 1 | 1 | - | - | - | - | - | - | - | - | - | - | - |
| DP045D22R0 | 22 (0.9") | 6 (13.2) | 438 (17.2) | 1 | 1 | - | - | - | - | - | - | - | - | - | - | - |
| DP060D22R0 | 22 (0.9") | 9 (19.8) | 597 (23.5) | 1 | 1 | - | - | - | - | - | - | - | - | - | - | - |
| DP085D22R0 | 22 (0.9") | 9 (19.8) | 835 (32.9) | 1 | 1 | - | - | - | - | - | - | - | - | - | - | - |
| DP035D30R0 | 30 (1.2") | 5 (11) | 343 (13.5) | - | - | 1 | - | - | - | - | - | - | - | - | - | - |
| DP045D30R0 | 30 (1.2") | 8 (17.6) | 427 (16.8) | - | - | 1 | 1 | - | - | - | - | - | - | - | - | - |
| DP060D30R0 | 30 (1.2") | 12 (26.5) | 596 (23.5) | - | - | 1 | 1 | 1 | 1 | - | - | - | - | - | - | - |
| DP085D30R0 | 30 (1.2") | 18 (39.7) | 850 (33.5) | - | - | 1 | 1 | 1 | 1 | 1 | 1 | (2)* | (2)* | - | - | - |
| DP105D30R0 | 30 (1.2") | 18 (39.7) | 1048 (41.3) | - | - | 1 | 1 | 1 | 1 | 1 | 1 | (2)* | (2)* | - | - | - |
| DP125D30R0 | 30 (1.2") | 18 (39.7) | 1245 (49) | - | - | 1 | 1 | 1 | 1 | 1 | 1 | (2)* | (2)* | - | - | - |
| DP165D30R0 | 30 (1.2") | 18 (39.7) | 1636 (64.4) | - | - | - | - | - | 1 | 1 | 1 | (2)* | (2)* | - | - | - |
| DP085D40R0 | 40 (1.6") | 25 (55.1) | 834 (32.8) | - | - | - | - | - | - | - | - | 1 | (2)** | (2)** | 2 | (4)** |
| DP105D40R0 | 40 (1.6") | 35 (77.2) | 1015 (40) | - | - | - | - | - | - | - | - | 1 | 1 | (2)** | 2 | 2 |
| DP125D40R0 | 40 (1.6") | 45 (99.2) | 1022 (40.2) | - | - | - | - | - | - | - | - | 1 | 1 | 1 | 1** | 2 |
| DP165D40R0 | 40 (1.6") | 45 (99.2) | 1636 (64.4) | - | - | - | - | - | - | - | - | - | 1 | 1 | 1** | 2 |
| DP205D40R0 | 40 (1.6") | 45 (99.2) | 2025 (79.7) | - | - | - | - | - | - | - | - | - | 1 | 1 | 1** | 2 |

Tab. 11.e

- 1 = the humidifier is connected to just one distributor
- (2) = the humidifier is connected to two distributors (using the "Y" kit: UEKY000000)
- 2 = the humidifier is fitted with two outlets and can be connected to two linear distributors
- (4) = the humidifier is fitted with two outlets and can be connected to up to four linear distributors (using two "Y" kits)
- * = use CAREL "Y" kit code UEKY000000 (40 mm/1.6" inlet and 2 x 30 mm/1.2" outlets)
- ** = use CAREL "Y" kit code UEKY40X400 (40 mm/1.6" inlet and 2 x 40 mm/1.6" outlets)
- *** = use two CAREL "Y" kit code UEKY40X400 (40 mm/1.6" inlet and 2 x 40 mm/1.6" outlets)

For typical installations of the linear distributors, see Fig. 11.f on page40.

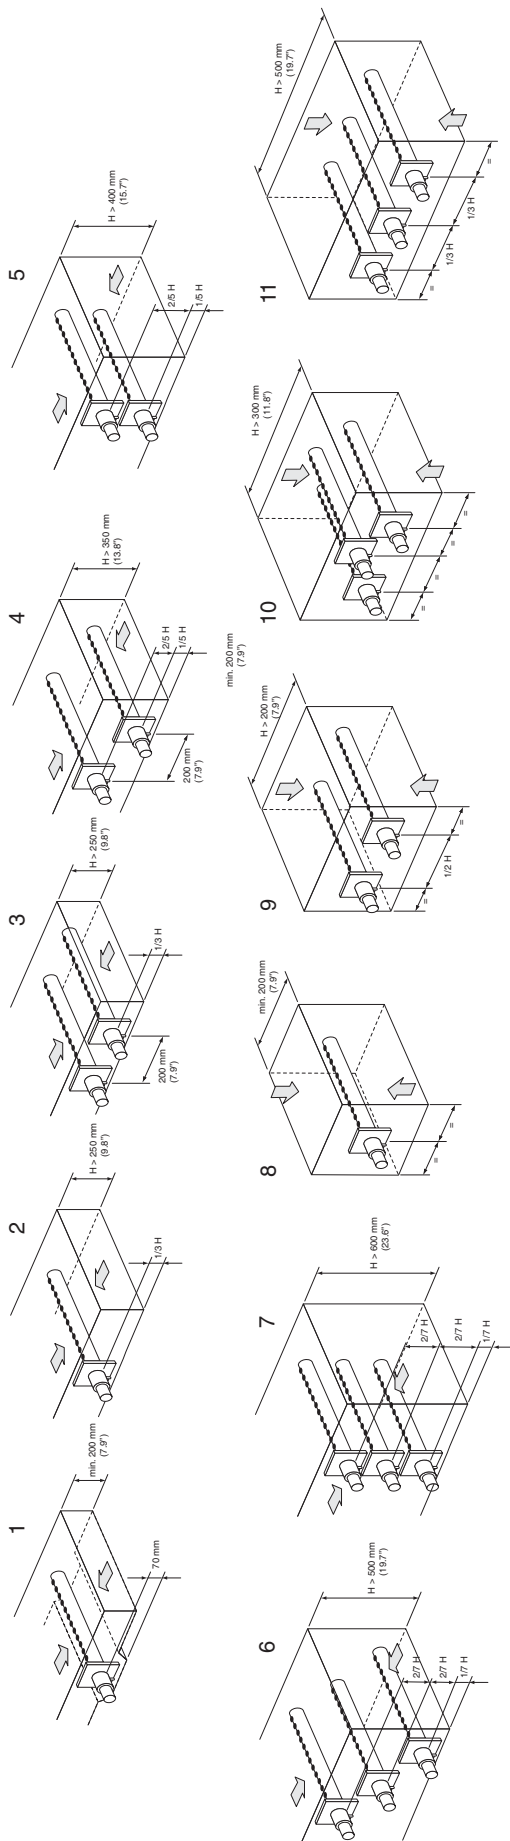

11.6 Table of parameter b1

| b1 | Alarm relay oscillation when "CY" alarm is on | Dilution drain with contactor | Drain if new request ≤ 2/3 current request (contact open) | Total drain due to inactivity | Display of "CL" & "CP" alarms | Alarm relay activated if.. | Periodical total drain | Enable management of steam request signal /external fan control relay M14 |
|--------|---|-------------------------------|---|-------------------------------|-------------------------------|----------------------------|------------------------|---|
| DEF. 0 | OFF | open | YES | ON, depending on bF | ON | alarms in progress | OFF | Disabled |
| 1 | ON | open | YES | ON, depending on bF | ON | alarms in progress | OFF | Disabled |
| 2 | OFF | closed | YES | ON, depending on bF | ON | alarms in progress | OFF | Disabled |
| 3 | ON | closed | YES | ON, depending on bF | ON | alarms in progress | OFF | Disabled |
| 4 | OFF | open | NO | ON, depending on bF | ON | alarms in progress | OFF | Disabled |
| 5 | ON | open | NO | ON, depending on bF | ON | alarms in progress | OFF | Disabled |
| 6 | OFF | closed | NO | ON, depending on bF | ON | alarms in progress | OFF | Disabled |
| 7 | ON | closed | NO | ON, depending on bF | ON | alarms in progress | OFF | Disabled |
| 8 | OFF | open | YES | OFF | ON | alarms in progress | OFF | Disabled |
| 9 | ON | open | YES | OFF | ON | alarms in progress | OFF | Disabled |
| 10 | OFF | closed | YES | OFF | ON | alarms in progress | OFF | Disabled |
| 11 | ON | closed | YES | OFF | ON | alarms in progress | OFF | Disabled |
| 12 | OFF | open | NO | OFF | ON | alarms in progress | OFF | Disabled |
| 13 | ON | open | NO | OFF | ON | alarms in progress | OFF | Disabled |
| 14 | OFF | closed | NO | OFF | ON | alarms in progress | OFF | Disabled |
| 15 | ON | closed | NO | OFF | ON | alarms in progress | OFF | Disabled |
| 16 | OFF | open | YES | ON, depending on bF | OFF | alarms in progress | OFF | Disabled |
| 17 | ON | open | YES | ON, depending on bF | OFF | alarms in progress | OFF | Disabled |
| 18 | OFF | closed | YES | ON, depending on bF | OFF | alarms in progress | OFF | Disabled |
| 19 | ON | closed | YES | ON, depending on bF | OFF | alarms in progress | OFF | Disabled |
| 20 | OFF | open | NO | ON, depending on bF | OFF | alarms in progress | OFF | Disabled |
| 21 | ON | open | NO | ON, depending on bF | OFF | alarms in progress | OFF | Disabled |
| 22 | OFF | closed | NO | ON, depending on bF | OFF | alarms in progress | OFF | Disabled |
| 23 | ON | closed | NO | ON, depending on bF | OFF | alarms in progress | OFF | Disabled |
| 24 | OFF | open | YES | OFF | OFF | alarms in progress | OFF | Disabled |
| 25 | ON | open | YES | OFF | OFF | alarms in progress | OFF | Disabled |
| 26 | OFF | closed | YES | OFF | OFF | alarms in progress | OFF | Disabled |
| 27 | ON | closed | YES | OFF | OFF | alarms in progress | OFF | Disabled |
| 28 | OFF | open | NO | OFF | OFF | alarms in progress | OFF | Disabled |
| 29 | ON | open | NO | OFF | OFF | alarms in progress | OFF | Disabled |
| 30 | OFF | closed | NO | OFF | OFF | alarms in progress | OFF | Disabled |
| 31 | ON | closed | NO | OFF | OFF | alarms in progress | OFF | Disabled |
| 32 | OFF | open | YES | ON, depending on bF | ON | no alarms in progress | OFF | Disabled |
| 33 | ON | open | YES | ON, depending on bF | ON | no alarms in progress | OFF | Disabled |
| 34 | OFF | closed | YES | ON, depending on bF | ON | no alarms in progress | OFF | Disabled |
| 35 | ON | closed | YES | ON, depending on bF | ON | no alarms in progress | OFF | Disabled |
| 36 | OFF | open | NO | ON, depending on bF | ON | no alarms in progress | OFF | Disabled |
| 37 | ON | open | NO | ON, depending on bF | ON | no alarms in progress | OFF | Disabled |
| 38 | OFF | closed | NO | ON, depending on bF | ON | no alarms in progress | OFF | Disabled |
| 39 | ON | closed | NO | ON, depending on bF | ON | no alarms in progress | OFF | Disabled |
| 40 | OFF | open | YES | OFF | ON | no alarms in progress | OFF | Disabled |
| 41 | ON | open | YES | OFF | ON | no alarms in progress | OFF | Disabled |
| 42 | OFF | closed | YES | OFF | ON | no alarms in progress | OFF | Disabled |
| 43 | ON | closed | YES | OFF | ON | no alarms in progress | OFF | Disabled |
| 44 | OFF | open | NO | OFF | ON | no alarms in progress | OFF | Disabled |
| 45 | ON | open | NO | OFF | ON | no alarms in progress | OFF | Disabled |
| 46 | OFF | closed | NO | OFF | ON | no alarms in progress | OFF | Disabled |
| 47 | ON | closed | NO | OFF | ON | no alarms in progress | OFF | Disabled |
| 48 | OFF | open | YES | ON, depending on bF | OFF | no alarms in progress | OFF | Disabled |
| 49 | ON | open | YES | ON, depending on bF | OFF | no alarms in progress | OFF | Disabled |
| 50 | OFF | closed | YES | ON, depending on bF | OFF | no alarms in progress | OFF | Disabled |
| 51 | ON | closed | YES | ON, depending on bF | OFF | no alarms in progress | OFF | Disabled |
| 52 | OFF | open | NO | ON, depending on bF | OFF | no alarms in progress | OFF | Disabled |
| 53 | ON | open | NO | ON, depending on bF | OFF | no alarms in progress | OFF | Disabled |
| 54 | OFF | closed | NO | ON, depending on bF | OFF | no alarms in progress | OFF | Disabled |
| 55 | ON | closed | NO | ON, depending on bF | OFF | no alarms in progress | OFF | Disabled |
| 56 | OFF | open | YES | OFF | OFF | no alarms in progress | OFF | Disabled |
| 57 | ON | open | YES | OFF | OFF | no alarms in progress | OFF | Disabled |
| 58 | OFF | closed | YES | OFF | OFF | no alarms in progress | OFF | Disabled |
| 59 | ON | closed | YES | OFF | OFF | no alarms in progress | OFF | Disabled |
| 60 | OFF | open | NO | OFF | OFF | no alarms in progress | OFF | Disabled |
| 61 | ON | open | NO | OFF | OFF | no alarms in progress | OFF | Disabled |
| 62 | OFF | closed | NO | OFF | OFF | no alarms in progress | OFF | Disabled |

| b1 | Alarm relay oscillation when "CY" alarm is on | Dilution drain with contactor | Drain if new request ≤ 2/3 current request (contact open) | Total drain due to inactivity | Display of "CL" & "CP" alarms | Alarm relay activated if... | Periodical total drain | Enable management of steam request signal /external fan control relay M14 |
|-----|---|-------------------------------|--|-------------------------------|-------------------------------|-----------------------------|------------------------|---|
| 63 | ON | closed | NO | OFF | OFF | no alarms in progress | OFF | Disabled |
| 64 | OFF | open | YES | ON, depending on bF | ON | alarms in progress | ON, depending on bE | Disabled |
| 65 | ON | open | YES | ON, depending on bF | ON | alarms in progress | ON, depending on bE | Disabled |
| 66 | OFF | closed | YES | ON, depending on bF | ON | alarms in progress | ON, depending on bE | Disabled |
| 67 | ON | closed | YES | ON, depending on bF | ON | alarms in progress | ON, depending on bE | Disabled |
| 68 | OFF | open | NO | ON, depending on bF | ON | alarms in progress | ON, depending on bE | Disabled |
| 69 | ON | open | NO | ON, depending on bF | ON | alarms in progress | ON, depending on bE | Disabled |
| 70 | OFF | closed | NO | ON, depending on bF | ON | alarms in progress | ON, depending on bE | Disabled |
| 71 | ON | closed | NO | ON, depending on bF | ON | alarms in progress | ON, depending on bE | Disabled |
| 72 | OFF | open | YES | OFF | ON | alarms in progress | ON, depending on bE | Disabled |
| 73 | ON | open | YES | OFF | ON | alarms in progress | ON, depending on bE | Disabled |
| 74 | OFF | closed | YES | OFF | ON | alarms in progress | ON, depending on bE | Disabled |
| 75 | ON | closed | YES | OFF | ON | alarms in progress | ON, depending on bE | Disabled |
| 76 | OFF | open | NO | OFF | ON | alarms in progress | ON, depending on bE | Disabled |
| 77 | ON | open | NO | OFF | ON | alarms in progress | ON, depending on bE | Disabled |
| 78 | OFF | closed | NO | OFF | ON | alarms in progress | ON, depending on bE | Disabled |
| 79 | ON | closed | NO | OFF | ON | alarms in progress | ON, depending on bE | Disabled |
| 80 | OFF | open | YES | ON, depending on bF | OFF | alarms in progress | ON, depending on bE | Disabled |
| 81 | ON | open | YES | ON, depending on bF | OFF | alarms in progress | ON, depending on bE | Disabled |
| 82 | OFF | closed | YES | ON, depending on bF | OFF | alarms in progress | ON, depending on bE | Disabled |
| 83 | ON | closed | YES | ON, depending on bF | OFF | alarms in progress | ON, depending on bE | Disabled |
| 84 | OFF | open | NO | ON, depending on bF | OFF | alarms in progress | ON, depending on bE | Disabled |
| 85 | ON | open | NO | ON, depending on bF | OFF | alarms in progress | ON, depending on bE | Disabled |
| 86 | OFF | closed | NO | ON, depending on bF | OFF | alarms in progress | ON, depending on bE | Disabled |
| 87 | ON | closed | NO | ON, depending on bF | OFF | alarms in progress | ON, depending on bE | Disabled |
| 88 | OFF | open | YES | OFF | OFF | alarms in progress | ON, depending on bE | Disabled |
| 89 | ON | open | YES | OFF | OFF | alarms in progress | ON, depending on bE | Disabled |
| 90 | OFF | closed | YES | OFF | OFF | alarms in progress | ON, depending on bE | Disabled |
| 91 | ON | closed | YES | OFF | OFF | alarms in progress | ON, depending on bE | Disabled |
| 92 | OFF | open | NO | OFF | OFF | alarms in progress | ON, depending on bE | Disabled |
| 93 | ON | open | NO | OFF | OFF | alarms in progress | ON, depending on bE | Disabled |
| 94 | OFF | closed | NO | OFF | OFF | alarms in progress | ON, depending on bE | Disabled |
| 95 | ON | closed | NO | OFF | OFF | alarms in progress | ON, depending on bE | Disabled |
| 96 | OFF | open | YES | ON, depending on bF | ON | no alarms in progress | ON, depending on bE | Disabled |
| 97 | ON | open | YES | ON, depending on bF | ON | no alarms in progress | ON, depending on bE | Disabled |
| 98 | OFF | closed | YES | ON, depending on bF | ON | no alarms in progress | ON, depending on bE | Disabled |
| 99 | ON | closed | YES | ON, depending on bF | ON | no alarms in progress | ON, depending on bE | Disabled |
| 100 | OFF | open | NO | ON, depending on bF | ON | no alarms in progress | ON, depending on bE | Disabled |
| 101 | ON | open | NO | ON, depending on bF | ON | no alarms in progress | ON, depending on bE | Disabled |
| 102 | OFF | closed | NO | ON, depending on bF | ON | no alarms in progress | ON, depending on bE | Disabled |
| 103 | ON | closed | NO | ON, depending on bF | ON | no alarms in progress | ON, depending on bE | Disabled |
| 104 | OFF | open | YES | OFF | ON | no alarms in progress | ON, depending on bE | Disabled |
| 105 | ON | open | YES | OFF | ON | no alarms in progress | ON, depending on bE | Disabled |
| 106 | OFF | closed | YES | OFF | ON | no alarms in progress | ON, depending on bE | Disabled |
| 107 | ON | closed | YES | OFF | ON | no alarms in progress | ON, depending on bE | Disabled |
| 108 | OFF | open | NO | OFF | ON | no alarms in progress | ON, depending on bE | Disabled |
| 109 | ON | open | NO | OFF | ON | no alarms in progress | ON, depending on bE | Disabled |
| 110 | OFF | closed | NO | OFF | ON | no alarms in progress | ON, depending on bE | Disabled |
| 111 | ON | closed | NO | OFF | ON | no alarms in progress | ON, depending on bE | Disabled |
| 112 | OFF | open | YES | ON, depending on bF | OFF | no alarms in progress | ON, depending on bE | Disabled |
| 113 | ON | open | YES | ON, depending on bF | OFF | no alarms in progress | ON, depending on bE | Disabled |
| 114 | OFF | closed | YES | ON, depending on bF | OFF | no alarms in progress | ON, depending on bE | Disabled |
| 115 | ON | closed | YES | ON, depending on bF | OFF | no alarms in progress | ON, depending on bE | Disabled |
| 116 | OFF | open | NO | ON, depending on bF | OFF | no alarms in progress | ON, depending on bE | Disabled |
| 117 | ON | open | NO | ON, depending on bF | OFF | no alarms in progress | ON, depending on bE | Disabled |
| 118 | OFF | closed | NO | ON, depending on bF | OFF | no alarms in progress | ON, depending on bE | Disabled |
| 119 | ON | closed | NO | ON, depending on bF | OFF | no alarms in progress | ON, depending on bE | Disabled |
| 120 | OFF | open | YES | OFF | OFF | no alarms in progress | ON, depending on bE | Disabled |
| 121 | ON | open | YES | OFF | OFF | no alarms in progress | ON, depending on bE | Disabled |
| 122 | OFF | closed | YES | OFF | OFF | no alarms in progress | ON, depending on bE | Disabled |
| 123 | ON | closed | YES | OFF | OFF | no alarms in progress | ON, depending on bE | Disabled |
| 124 | OFF | open | NO | OFF | OFF | no alarms in progress | ON, depending on bE | Disabled |
| 125 | ON | open | NO | OFF | OFF | no alarms in progress | ON, depending on bE | Disabled |
| 126 | OFF | closed | NO | OFF | OFF | no alarms in progress | ON, depending on bE | Disabled |
| 127 | ON | closed | NO | OFF | OFF | no alarms in progress | ON, depending on bE | Disabled |

Tab. 11.f

11.6 Table of parameter b1

| b1 | Alarm relay oscillation when "CY" alarm is on | Dilution drain with contactor | Drain if new request ≤ 2/3 current request (contact open) | Total drain due to inactivity | Display of "CL" & "CP" alarms | Alarm relay activated if... | Periodical total drain | Enable management of steam request signal /external fan control relay M14 |
|-----|---|-------------------------------|---|-------------------------------|-------------------------------|-----------------------------|------------------------|---|
| 128 | OFF | open | YES | ON, depending on bF | ON | alarms in progress | OFF | Enabled |
| 129 | ON | open | YES | ON, depending on bF | ON | alarms in progress | OFF | Enabled |
| 130 | OFF | closed | YES | ON, depending on bF | ON | alarms in progress | OFF | Enabled |
| 131 | ON | closed | YES | ON, depending on bF | ON | alarms in progress | OFF | Enabled |
| 132 | OFF | open | NO | ON, depending on bF | ON | alarms in progress | OFF | Enabled |
| 133 | ON | open | NO | ON, depending on bF | ON | alarms in progress | OFF | Enabled |
| 134 | OFF | closed | NO | ON, depending on bF | ON | alarms in progress | OFF | Enabled |
| 135 | ON | closed | NO | ON, depending on bF | ON | alarms in progress | OFF | Enabled |
| 136 | OFF | open | YES | OFF | ON | alarms in progress | OFF | Enabled |
| 137 | ON | open | YES | OFF | ON | alarms in progress | OFF | Enabled |
| 138 | OFF | closed | YES | OFF | ON | alarms in progress | OFF | Enabled |
| 139 | ON | closed | YES | OFF | ON | alarms in progress | OFF | Enabled |
| 140 | OFF | open | NO | OFF | ON | alarms in progress | OFF | Enabled |
| 141 | ON | open | NO | OFF | ON | alarms in progress | OFF | Enabled |
| 142 | OFF | closed | NO | OFF | ON | alarms in progress | OFF | Enabled |
| 143 | ON | closed | NO | OFF | ON | alarms in progress | OFF | Enabled |
| 144 | OFF | open | YES | ON, depending on bF | OFF | alarms in progress | OFF | Enabled |
| 145 | ON | open | YES | ON, depending on bF | OFF | alarms in progress | OFF | Enabled |
| 146 | OFF | closed | YES | ON, depending on bF | OFF | alarms in progress | OFF | Enabled |
| 147 | ON | closed | YES | ON, depending on bF | OFF | alarms in progress | OFF | Enabled |
| 148 | OFF | open | NO | ON, depending on bF | OFF | alarms in progress | OFF | Enabled |
| 149 | ON | open | NO | ON, depending on bF | OFF | alarms in progress | OFF | Enabled |
| 150 | OFF | closed | NO | ON, depending on bF | OFF | alarms in progress | OFF | Enabled |
| 151 | ON | closed | NO | ON, depending on bF | OFF | alarms in progress | OFF | Enabled |
| 152 | OFF | open | YES | OFF | OFF | alarms in progress | OFF | Enabled |
| 153 | ON | open | YES | OFF | OFF | alarms in progress | OFF | Enabled |
| 154 | OFF | closed | YES | OFF | OFF | alarms in progress | OFF | Enabled |
| 155 | ON | closed | YES | OFF | OFF | alarms in progress | OFF | Enabled |
| 156 | OFF | open | NO | OFF | OFF | alarms in progress | OFF | Enabled |
| 157 | ON | open | NO | OFF | OFF | alarms in progress | OFF | Enabled |
| 158 | OFF | closed | NO | OFF | OFF | alarms in progress | OFF | Enabled |
| 159 | ON | closed | NO | OFF | OFF | alarms in progress | OFF | Enabled |
| 160 | OFF | open | YES | ON, depending on bF | ON | no alarms in progress | OFF | Enabled |
| 161 | ON | open | YES | ON, depending on bF | ON | no alarms in progress | OFF | Enabled |
| 162 | OFF | closed | YES | ON, depending on bF | ON | no alarms in progress | OFF | Enabled |
| 163 | ON | closed | YES | ON, depending on bF | ON | no alarms in progress | OFF | Enabled |
| 164 | OFF | open | NO | ON, depending on bF | ON | no alarms in progress | OFF | Enabled |
| 165 | ON | open | NO | ON, depending on bF | ON | no alarms in progress | OFF | Enabled |
| 166 | OFF | closed | NO | ON, depending on bF | ON | no alarms in progress | OFF | Enabled |
| 167 | ON | closed | NO | ON, depending on bF | ON | no alarms in progress | OFF | Enabled |
| 168 | OFF | open | YES | OFF | ON | no alarms in progress | OFF | Enabled |
| 169 | ON | open | YES | OFF | ON | no alarms in progress | OFF | Enabled |
| 170 | OFF | closed | YES | OFF | ON | no alarms in progress | OFF | Enabled |
| 171 | ON | closed | YES | OFF | ON | no alarms in progress | OFF | Enabled |
| 172 | OFF | open | NO | OFF | ON | no alarms in progress | OFF | Enabled |
| 173 | ON | open | NO | OFF | ON | no alarms in progress | OFF | Enabled |
| 174 | OFF | closed | NO | OFF | ON | no alarms in progress | OFF | Enabled |
| 175 | ON | closed | NO | OFF | ON | no alarms in progress | OFF | Enabled |
| 176 | OFF | open | YES | ON, depending on bF | OFF | no alarms in progress | OFF | Enabled |
| 177 | ON | open | YES | ON, depending on bF | OFF | no alarms in progress | OFF | Enabled |
| 178 | OFF | closed | YES | ON, depending on bF | OFF | no alarms in progress | OFF | Enabled |
| 179 | ON | closed | YES | ON, depending on bF | OFF | no alarms in progress | OFF | Enabled |
| 180 | OFF | open | NO | ON, depending on bF | OFF | no alarms in progress | OFF | Enabled |
| 181 | ON | open | NO | ON, depending on bF | OFF | no alarms in progress | OFF | Enabled |
| 182 | OFF | closed | NO | ON, depending on bF | OFF | no alarms in progress | OFF | Enabled |
| 183 | ON | closed | NO | ON, depending on bF | OFF | no alarms in progress | OFF | Enabled |
| 184 | OFF | open | YES | OFF | OFF | no alarms in progress | OFF | Enabled |
| 185 | ON | open | YES | OFF | OFF | no alarms in progress | OFF | Enabled |
| 186 | OFF | closed | YES | OFF | OFF | no alarms in progress | OFF | Enabled |
| 187 | ON | closed | YES | OFF | OFF | no alarms in progress | OFF | Enabled |
| 188 | OFF | open | NO | OFF | OFF | no alarms in progress | OFF | Enabled |
| 189 | ON | open | NO | OFF | OFF | no alarms in progress | OFF | Enabled |
| 190 | OFF | closed | NO | OFF | OFF | no alarms in progress | OFF | Enabled |

| b1 | Alarm relay oscillation when "CY" alarm is on | Dilution drain with contactor | Drain if new request ≤ 2/3 current request (contact open) | Total drain due to inactivity | Display of "CL" & "CP" alarms | Alarm relay activated if... | Periodical total drain | Enable management of steam request signal /external fan control relay M14 |
|-----|---|-------------------------------|--|-------------------------------|-------------------------------|-----------------------------|------------------------|---|
| 191 | ON | closed | NO | OFF | OFF | no alarms in progress | OFF | Enabled |
| 192 | OFF | open | YES | ON, depending on bF | ON | alarms in progress | ON, depending on bE | Enabled |
| 193 | ON | open | YES | ON, depending on bF | ON | alarms in progress | ON, depending on bE | Enabled |
| 194 | OFF | closed | YES | ON, depending on bF | ON | alarms in progress | ON, depending on bE | Enabled |
| 195 | ON | closed | YES | ON, depending on bF | ON | alarms in progress | ON, depending on bE | Enabled |
| 196 | OFF | open | NO | ON, depending on bF | ON | alarms in progress | ON, depending on bE | Enabled |
| 197 | ON | open | NO | ON, depending on bF | ON | alarms in progress | ON, depending on bE | Enabled |
| 198 | OFF | closed | NO | ON, depending on bF | ON | alarms in progress | ON, depending on bE | Enabled |
| 199 | ON | closed | NO | ON, depending on bF | ON | alarms in progress | ON, depending on bE | Enabled |
| 200 | OFF | open | YES | OFF | ON | alarms in progress | ON, depending on bE | Enabled |
| 201 | ON | open | YES | OFF | ON | alarms in progress | ON, depending on bE | Enabled |
| 202 | OFF | closed | YES | OFF | ON | alarms in progress | ON, depending on bE | Enabled |
| 203 | ON | closed | YES | OFF | ON | alarms in progress | ON, depending on bE | Enabled |
| 204 | OFF | open | NO | OFF | ON | alarms in progress | ON, depending on bE | Enabled |
| 205 | ON | open | NO | OFF | ON | alarms in progress | ON, depending on bE | Enabled |
| 206 | OFF | closed | NO | OFF | ON | alarms in progress | ON, depending on bE | Enabled |
| 207 | ON | closed | NO | OFF | ON | alarms in progress | ON, depending on bE | Enabled |
| 208 | OFF | open | YES | ON, depending on bF | OFF | alarms in progress | ON, depending on bE | Enabled |
| 209 | ON | open | YES | ON, depending on bF | OFF | alarms in progress | ON, depending on bE | Enabled |
| 210 | OFF | closed | YES | ON, depending on bF | OFF | alarms in progress | ON, depending on bE | Enabled |
| 211 | ON | closed | YES | ON, depending on bF | OFF | alarms in progress | ON, depending on bE | Enabled |
| 212 | OFF | open | NO | ON, depending on bF | OFF | alarms in progress | ON, depending on bE | Enabled |
| 213 | ON | open | NO | ON, depending on bF | OFF | alarms in progress | ON, depending on bE | Enabled |
| 214 | OFF | closed | NO | ON, depending on bF | OFF | alarms in progress | ON, depending on bE | Enabled |
| 215 | ON | closed | NO | ON, depending on bF | OFF | alarms in progress | ON, depending on bE | Enabled |
| 216 | OFF | open | YES | OFF | OFF | alarms in progress | ON, depending on bE | Enabled |
| 217 | ON | open | YES | OFF | OFF | alarms in progress | ON, depending on bE | Enabled |
| 218 | OFF | closed | YES | OFF | OFF | alarms in progress | ON, depending on bE | Enabled |
| 219 | ON | closed | YES | OFF | OFF | alarms in progress | ON, depending on bE | Enabled |
| 220 | OFF | open | NO | OFF | OFF | alarms in progress | ON, depending on bE | Enabled |
| 221 | ON | open | NO | OFF | OFF | alarms in progress | ON, depending on bE | Enabled |
| 222 | OFF | closed | NO | OFF | OFF | alarms in progress | ON, depending on bE | Enabled |
| 223 | ON | closed | NO | OFF | OFF | alarms in progress | ON, depending on bE | Enabled |
| 224 | OFF | open | YES | ON, depending on bF | ON | no alarms in progress | ON, depending on bE | Enabled |
| 225 | ON | open | YES | ON, depending on bF | ON | no alarms in progress | ON, depending on bE | Enabled |
| 226 | OFF | closed | YES | ON, depending on bF | ON | no alarms in progress | ON, depending on bE | Enabled |
| 227 | ON | closed | YES | ON, depending on bF | ON | no alarms in progress | ON, depending on bE | Enabled |
| 228 | OFF | open | NO | ON, depending on bF | ON | no alarms in progress | ON, depending on bE | Enabled |
| 229 | ON | open | NO | ON, depending on bF | ON | no alarms in progress | ON, depending on bE | Enabled |
| 230 | OFF | closed | NO | ON, depending on bF | ON | no alarms in progress | ON, depending on bE | Enabled |
| 231 | ON | closed | NO | ON, depending on bF | ON | no alarms in progress | ON, depending on bE | Enabled |
| 232 | OFF | open | YES | OFF | ON | no alarms in progress | ON, depending on bE | Enabled |
| 233 | ON | open | YES | OFF | ON | no alarms in progress | ON, depending on bE | Enabled |
| 234 | OFF | closed | YES | OFF | ON | no alarms in progress | ON, depending on bE | Enabled |
| 235 | ON | closed | YES | OFF | ON | no alarms in progress | ON, depending on bE | Enabled |
| 236 | OFF | open | NO | OFF | ON | no alarms in progress | ON, depending on bE | Enabled |
| 237 | ON | open | NO | OFF | ON | no alarms in progress | ON, depending on bE | Enabled |
| 238 | OFF | closed | NO | OFF | ON | no alarms in progress | ON, depending on bE | Enabled |
| 239 | ON | closed | NO | OFF | ON | no alarms in progress | ON, depending on bE | Enabled |
| 240 | OFF | open | YES | ON, depending on bF | OFF | no alarms in progress | ON, depending on bE | Enabled |
| 241 | ON | open | YES | ON, depending on bF | OFF | no alarms in progress | ON, depending on bE | Enabled |
| 242 | OFF | closed | YES | ON, depending on bF | OFF | no alarms in progress | ON, depending on bE | Enabled |
| 243 | ON | closed | YES | ON, depending on bF | OFF | no alarms in progress | ON, depending on bE | Enabled |
| 244 | OFF | open | NO | ON, depending on bF | OFF | no alarms in progress | ON, depending on bE | Enabled |
| 245 | ON | open | NO | ON, depending on bF | OFF | no alarms in progress | ON, depending on bE | Enabled |
| 246 | OFF | closed | NO | ON, depending on bF | OFF | no alarms in progress | ON, depending on bE | Enabled |
| 247 | ON | closed | NO | ON, depending on bF | OFF | no alarms in progress | ON, depending on bE | Enabled |
| 248 | OFF | open | YES | OFF | OFF | no alarms in progress | ON, depending on bE | Enabled |
| 249 | ON | open | YES | OFF | OFF | no alarms in progress | ON, depending on bE | Enabled |
| 250 | OFF | closed | YES | OFF | OFF | no alarms in progress | ON, depending on bE | Enabled |
| 251 | ON | closed | YES | OFF | OFF | no alarms in progress | ON, depending on bE | Enabled |
| 252 | OFF | open | NO | OFF | OFF | no alarms in progress | ON, depending on bE | Enabled |
| 253 | ON | open | NO | OFF | OFF | no alarms in progress | ON, depending on bE | Enabled |
| 254 | OFF | closed | NO | OFF | OFF | no alarms in progress | ON, depending on bE | Enabled |
| 255 | ON | closed | NO | OFF | OFF | no alarms in progress | ON, depending on bE | Enabled |

Tab. 11.f

11.7 CONTROLLING THE BOARD VIA NETWORK

The variables shown in the list are only some of the total variables available. DO NOT CONFIGURE VARIABLES THAT ARE NOT SHOWN IN THE TABLE, OTHERWISE THE OPERATION OF THE HUMIDIFIER MAY BE AFFECTED. NOTE:

The software release is made up of 4 digits and is shown on the sticker on the back of the controller. For example, the code "1.080" indicates: hardware release "1.0" and software release "8.0". Make sure the correct network address has been set for parameter C3 (internal variable I13) before setting the address of the CPY controllers. Each humidifier is configured by default with address 1, two units cannot have the same address.

| "A" | | analogue variables* (Modbus®: REGISTERS) |
|-------|---------|--|
| CAREL | Modbus® | |
| | 3 | param. d9: rated capacity in kg/h (see the table of parameters) |
| | 4 | param. d7: maximum production in kg/h (see the table of parameters) |
| | 15 | param. d3: instant steam flow-rate in kg/h; read-only. Format "#### = #### (100 = 100 kg/h)". |
| | 30 | param. d6: current (A); read-only. Format "#### = #### (16 = 16a)". |
| | 33 | param. C8: maximum time with no data (sent to controller) over RS485 to generate stop production + "SU" alarm (see parameters table) |

* The data from the controller should be interpreted with a decimal point. E.g.:
var. 3=150 means 15.0 kg/h

| "I" | | integer variables (Modbus®: REGISTERS) |
|-------|---------|---|
| CAREL | Modbus® | |
| | 1 | param. P0: maximum production (see the table of parameters) |
| | 2 | param. A0: operating mode (see the table of parameters) |
| | 3 | param. A1: unit of measure (see the table of parameters) |
| | 4 | param. A2: type of production request (see the table of parameters) |
| | 5 | param. b1: additional functions (see the table of parameters) |
| | 6 | param. b2: off delay time (see the table of parameters) |
| | 7 | param. b4: water conductivity (see the table of parameters) |
| | 8 | param. b5: conductivity pre-alarm threshold (see the table of parameters) |
| | 9 | param. b6: conductivity alarm threshold (see the table of parameters) |
| | 10 | param. b7: foam control threshold (see the table of parameters) |
| | 11 | param. b8: conductivity control inside the cylinder in steady operation compared to rated value |
| | 12 | param. C0: rated value displayed (see the table of parameters) |
| | 13 | param. C3: serial port address (see the table of parameters) |
| | 14 | param. C4: baud rate (see the table of parameters) |
| | 15 | param. C5: supervisor: frame (see the table of parameters) |
| | 16 | param. C6: serial response transmission delay (see the table of parameters) |
| | 17 | param. b9: reduce duration of drain to dilute cycle (see the table of parameters) |
| | 18 | param. bb: cylinder maintenance limit time in hours (see the table of parameters) |
| | 19 | param. bE: time limit between two periodical drain cycles (see the table of parameters) |
| | 20 | param. bF: days delay for drain due to inactivity (see the table of parameters) |
| | 44 | param. d1: external control signal see paragraph "controlling production using variables I62 and I63, read-only; example format "#### = #### (0%-100%, step 1%)" |
| | 46 | humidifier status (read-only) 0 = not active (no request, shutdown or disabled); 1 = start evaporation cycle; 2 = water fill in progress; 3 = evaporation in progress; 4 = AFS drain; 5 = water drain (to dilute or manual); 6 = end of water drain; 7 = complete drain for long inactivity; 8 = complete drain from manual or network control; 9 = no water management; 10 = pre-wash; 11 = periodical drain |
| | 47 | type of humidification stage (read-only) 0 = not active; 1 = soft start; 2 = start of steady production the reduced production; 3 = steady production; 4 = reduced production; 5, 6, 7 = soft start |
| | 49 | param. d5: conductivity pre-alarm threshold [μ S/cm] read-only, see the table of parameters |
| | 54 | param. db: unit hour counter (not resettable, see the table of parameters) |
| | 55 | param. dA: cylinder hour counter (resettable, see the table of parameters) |
| | 62 | controls via RS485; bit 0: reset alarm log; bit 1: reset counter dA; bit 2: production request via variable I63; bit 3: pre-wash; bit 4: reset active alarms.; Bit 6: flag to enable stop production + alarm for serial disconnected; Bit 7: flag to request oldest alarm; Bit 8: flag to request most recent alarm; Bit 9: flag to load first alarm in log; Bit 12: flag to enable create user backup. Except for bit2, the others are always read as 0. On power-up, all the bits are equal to 0. |
| | 63 | production request via network (when I62 bit2 = 4) (0%-100%, step 1%). |
| | 64 | control board match-digit (read-only) |
| | 67 | param. c7 (see the table of parameters) |
| | 83 | alarm status: Bit 0: at least one BLOCK alarm present; Bit 1: at least one DISAB alarm present; Bit 2: at least one WARN alarm present |
| | 84 | alarms with shutdown (read-only) bit n=0 alarm not active, bit n=1 alarm active. See table of alarms: bit 0: alarm Mn; bit 1: alarm EC; bit 2: alarm E1; bit 3: alarm E0; bit 4: alarm EH; bit 5: alarm EP; bit 6: not used; bit 7: not used. |

| | | |
|----|-----|--|
| 85 | 340 | alarms with disabling (read-only) bit n=0 alarm not active, bit n=1 alarm active. See table of alarms: bit 0: alarm EU (automatic reset); bit 1: alarm E3; bit 2: alarm EF (automatic reset); bit 3: alarm Ed; bit 4: not used; bit 5: not used; bit 6: not used; bit 7: not used. |
| 86 | 341 | warnings (read-only) bit n=0 alarm not active, bit n=1 alarm active. See table of alarms: bit 0: pre-alarm CY; bit 1: warning Ec; bit 2: pre-alarm EA; bit 3: pre-alarm CP; bit 4: pre-alarm CL; bit 5, bit 6, bit 7: not used |
| 89 | 344 | read line in alarm log (see variable I62, bit7-8-9) |

| "D" | digital variables (Modbus®: COILS) |
|-----------------|--|
| CAREL - Modbus® | |
| 1 | humidifier disabled by remote ON/OFF (terminals M2.4 M2.5) read-only |
| 2 | disabling control signal: D2=1 => CPY disabled; D2=0 => CPY enabled (similar to remote ON/OFF) |
| 3 | humidifier ready and awaiting request (read-only) |
| 4 | contactor status: 0 = open, 1 = closed (read-only) |
| 5 | status of 24 Vac drain output: 0 = no drain, 1 = drain (read-only) |
| 6 | status of drain relay output: 0 = no drain, 1 = drain (read-only) |
| 7 | cumulative alarm relay: 0 = not energised, 1 = energised (read-only) |
| 8 | status of 24 Vac fill output: 0 = no fill, 1 = fill (read-only) |
| 10 | high water level: 0 = probes not activated, 1 = probes activated (read-only) |
| 17 | manual drain control: 0 = not active, 1 = active; if set to 1 via the network, the drain will be performed until maximum time or variable 'D17' is reset |
| 19 | CPY terminal connected and on-line: 0 = not on-line, 1 = on-line (read-only) |

11.8 Controlling production using variables I62 and I63

1. Via network, immediately after start-up, set D2 = 0 (D2 does not need to be set again if the board is not switch off).
2. Set I2 = 0 for ON/OFF control (A0 = 0), I2 = 1 for proportional control (A0 = 1)
3. Set I62 = 4 to send the request via variable I63. If A0=0, if I63 ≤50: OFF; if I63 ≥51: ON
4. Write the production request to variable I63, format 000 to 100 (0% to 100%).

NOTE: if bit6=1 in variable I62, steam production will stop when there is no control data flow over the RS485 serial link for a period exceeding the time set for parameter C8.
Production can resume when new data is sent.

11.9 Read alarm log via the network

Supervisor variable I89 shows the alarms saved in the log, one at a time. Normally this variable will always show the code of the most recent alarm; to scroll all the alarms saved, set the following bits of variable I62:

Variable I62 - bit7: Flag to request previous alarm (write-only)
Loads the code of the alarm saved prior to the current alarm displayed into variable I89.
If the current alarm is the oldest, the value 0 is loaded.

Variable I62 - bit8: Flag to request next alarm (write-only)
Loads the code of the alarm saved immediately after the current alarm displayed into variable I89.
If the current alarm is the most recent (for example after having set bit 0x0200), the value 0 is loaded

Variable I62 - bit9: Flag to load the last alarm in the log (write-only)
Loads the code of the most recent alarm into variable I89

The log can hold the most recent 366 alarms.

11.10 Loss of network communication

If there is a loss in network communication, UEY stops the unit by opening the contactor; UEY then goes into standby, without producing steam, and alarm E3 is displayed. Steam production resumes as follows:

- Communication is restored with the external controller: UEY automatically responds to the request from the external controller, and alarm E3 disappears.
- UEY is switched off and on again: UEY responds to the request from the external controller (if communication has been restored) or from the external signal (0-10 V, 4-20 mA, etc.) sent to terminals M2:1-2-3. In this way, if communication with the external controller is interrupted, steam production can be started again by switching UEY off an on again and sending the request using an external signal, 0-10 V (4-20 mA, etc.).

11.11 Modbus® protocol on the UEY boards

The Modbus® protocol can be selected using parameter C7 (see "Serial connection parameters").

Chapter 7 shows a list of variables and the corresponding addresses. For multiple read/writes, the maximum number of "Register" or "Coil" variables is 20.

The following functions are available:

- MB_READ_COIL_STATUS 1: used to request the status (ON or OFF) of a certain number of "Coil" variables (binary, 1 bit), starting from the specified address. Broadcast mode is not allowed.
- MB_READ_INPUT_STATUS 2: operationally identical to the above.
- MB_READ_HOLDING_REG 3: used to request the value of a consecutive block of "Register" variables (numeric, 16 bit). Broadcast mode is not allowed.
- MB_READ_INPUT_REG 4: operationally identical to the above.
- MB_FORCE_SINGLE_COIL 5: used to set the status of an individual "Coil" variable (binary, 1 bit) to ON or OFF (specifying the address of the bit in question). Broadcast mode is allowed.
- MB_PRESET_SINGLE_REG 6: used to set the value of an individual "Register" variable (numeric, 16 bit). Broadcast mode is allowed.
- MB_FORCE_MULTIPLE_COIL 15: used to set the status of a consecutive block of "Coil" variables (binary, 1 bit) (specifying the number of bits and number of bytes). Broadcast mode is allowed
- MB_PRESET_MULTIPLE_REG 16: used to set the value of a consecutive block of "Register" variables (numeric, 16 bit). Broadcast mode is allowed.

11.12 Exceptions managed

- 01 illegal function
- 02 illegal data address
- 03 illegal data value

12. ADVANCED FUNCTIONS

12.1 Operating principle

Immersed electrode humidifiers manufacture steam by boiling the water contained inside the cylinder. The heat required to boil the water is produced by passing an electrical current through the cylinder. This is done by applying a voltage to the electrodes immersed in the water.

Initially, when the cylinder is new or has just been cleaned, the current depends almost exclusively on the type of supply water: the more salts in the water, the higher the current, and the required steam production is achieved quicker. Over time the salt deposits in the cylinder increase (these do not evaporate with the water), helping achieve the rated production. In steady operation, the level of production required is maintained automatically by controlling the current input, adjusting the level of water in the cylinder.

The salts that deposit over time cause the progressive depletion of the cylinder. To avoid excessive accumulation, the humidifier automatically drains and replenishes a certain quantity of water at set intervals.

12.2 Control principles

ON/OFF control

The action is all or nothing, activated by an external contact that consequently determines the control set point and differential.

The external contact may be a humidistat, whose status determines the operation of the humidifier:

- contact closed: the humidifier produces steam if the remote ON/OFF contact is also closed;
- contact open: the production of steam ends.

Proportional control

The production of steam is proportional to the value of a signal "Y" from an external device. The type of signal can be selected between the following standards: 0 to 10 Vdc, 2 to 10 Vdc, 0 to 20 mA, 4 to 20 mA.

The entire range is indicated as the proportional band. The maximum production of the humidifier, corresponding to the value maximum of the external signal, can be set from 20% to 100% of the rated value of the humidifier (parameter P0).

The minimum production has an activation hysteresis, h_y , equal to 5% of the proportional band of the external signal "Y".

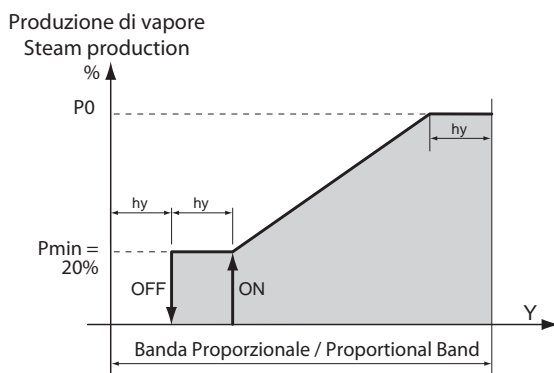


Fig. 12.a

12.3 Supply water conductivity

Conductivity measurement and alarms

The conductivity of the supply water is measured by the conductivity meter when the fill solenoid valve is opened.

Two programmable alarm thresholds are available:

- b5: warning threshold (signal only without activating the alarm relay, automatic reset when the condition is no longer present);
- b6: alarm threshold (unit shutdown with activation of the alarm relay).

The alarm is activated when the reading exceeds one of the two thresholds

continuously for 60 minutes, or alternatively instantly if the value read is 3 times higher than the threshold.

To disable the alarm signal, simply set the thresholds above the maximum value of the reading.

12.4 Automatic draining

The humidifier automatically drains and replaces some of the water contained in the cylinder, to prevent an excessive concentration of salts following the evaporation process.

The drain pump is opened for a set time whenever the conductivity exceeds the maximum limit; this situation is measured indirectly by evaluating the evaporation speed.

During the automatic draining phase, the electrodes are off, so as to prevent the drain water from carrying current (the display shows "dr").

Drain due to excess foam

With certain types of supply water, foam may form during the production of steam just above the water. This situation must be resolved, as it may cause water to be released together with the steam. For this purpose, two electrodes are fitted on the top of the cylinder. When these electrodes detect the presence of foam, the humidifier activates a series of repeated drain cycles. If the situation persists, the complete washing of the cylinder is activated.

Drain due to inactivity

In humidifier does not operate for an extended time (it remains on but does not produce steam), the water in the cylinder is drained automatically, to avoid stagnation and hygiene risks. The inactivity time is set using parameter "bF" (default 3 days). The function can be disabled by setting parameter b1 (see paragraph 11.6).

Powered draining

When running an automatic drain cycle due to excessive salt, the electrodes are not powered and the production of steam is thus reduced. To keep the electrodes powered during the drain cycle set parameter b1 (see paragraph 11.6).

Draining due to a significant reduction in the request for production

In the event of a significant reduction in the request for steam production, the humidifier, rather than wait for the level of water (and thus the production) to decrease due to the effect of the production itself, performs a drain cycle. The reduction in the request for steam production is considered significant if the current is 33% higher than that relating to the requested level. This function can be disabled.

Set parameter b1 (see paragraph 11.6)

Periodical drain

When using water rich in substances such as humus and lime, a periodical drain cycle should be set for the cylinder to avoid accumulating residues.

To enable the periodical drain, set parameter b1 to 64. In this way, every 24 h the humidifier will drain all the stagnant water in the cylinder, and the display will show code "dP" (periodical drain). If the periodical drain is enabled, the number of hours between two periodical drain cycles can be set using parameter "bE".

Note:

For the manual drain function, see chap. 6, for the mechanical drain see paragraph 9.4.

12.5 Automatic insufficient supply water management

The humidifier checks whether there is no supply water or the flow-rate of supply water is too low, by controlling if the current at the electrodes increases after opening the fill solenoid valve.

In this case, the humidifier:

- displays alarm "EF"
- activates the alarm relay,
- opens the contactor and closes the fill solenoid valve for 10 minutes.

After the 10 minutes, the fill solenoid valve is opened, the contactor closed and the phase current measured: if it increases the alarm is deactivated, otherwise the procedure is repeated.

NOTE: the alarm is reset automatically and is managed according to the procedure described above.

12.6 Alarm relay switching

Once the operating hours corresponding to the cylinder maintenance request have been reached ("CY" alarms), the alarm relay (if there are no other alarms active) will switch for 10 seconds every 12 hours, until reaching the "Mn" alarm.

This function is activated using parameter b1 (see paragraph 11.6); normally disabled

12.7 Auxiliary contact management (active fan request)

The auxiliary contact can be used to:

- remote signalling of steam production request (but not the actual value);
- activation/deactivation of an external fan unit, based on whether the steam production request is present.

Activating this function by parameter b1, the contact is activated (CLOSED) during steam production, with a delay of A6 seconds, and deactivated (OPEN) with a delay of A7 seconds.

During A6 and A7 the symbol (fan) will flash on the display, during activation the symbol (fan) will be on steady.

During the manual drain (see Chap. 6.12) the contact will be deactivated (always after the delay A7)

During pre-wash (see Chap. 6.1) the contact be activated, with the corresponding delays.

12.8 Manual procedure

This procedure is used to manually control the devices on the humidifier.

From the main screen, press the PRG button for 2 seconds.

Enter the password 70 using UP or DOWN.

The display will show **MA**n

Press PRG.

The display will show **tlr**

Then scroll the various devices using UP and DOWN:

- **tlr** = Contactor
- **drn** = Drain pump
- **FiL** = Fill SV
- **drt** = Drain tempering SV
- **ALr** = Alarm relay
- **FAn** = Auxiliary contact (fan)

Pressing PRG from any these options shows:

- ON if the device is currently active
- OFF if the device is currently inactive

Press PRG; the display starts flashing
Press UP or DOWN to modify the value
Press PRG to confirm.

Press ESC to return to the previous display.

N.B. THE MODE CAN ONLY BE EXITED USING THE ESC BUTTON FROM THE MAn DISPLAY OR BY SWITCHING OFF THE HUMIDIFIER.

12.9 LEDs on the control board

There are three LEDs fitted on the expansion board, located above the control board:

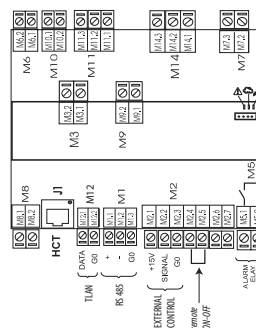


Fig. 12.b

Key:

| LED on board | Symbol on display | Meaning |
|--------------|-------------------|---|
| Red | | alarm in progress (the type of alarm can be identified based on the type of flashing, see chap. 8) |
| Yellow | | steam production in progress (led always on for 100% production, 2 blinking 20%, 3 blinking 30%, ...) |
| Green | | humidifier on |

Tab. 12.a

NOTE: The yellow and red LEDs are active only if the display is disconnected.

CAREL

CAREL INDUSTRIES HQs

Via dell'Industria, 11 - 35020 Brugine - Padova (Italy)
Tel. (+39) 049.9716611 - Fax (+39) 049.9716600
e-mail: carel@carel.com - www.carel.com

Agenzia / *Agency*: